Package Content (only for rackmount KVM)

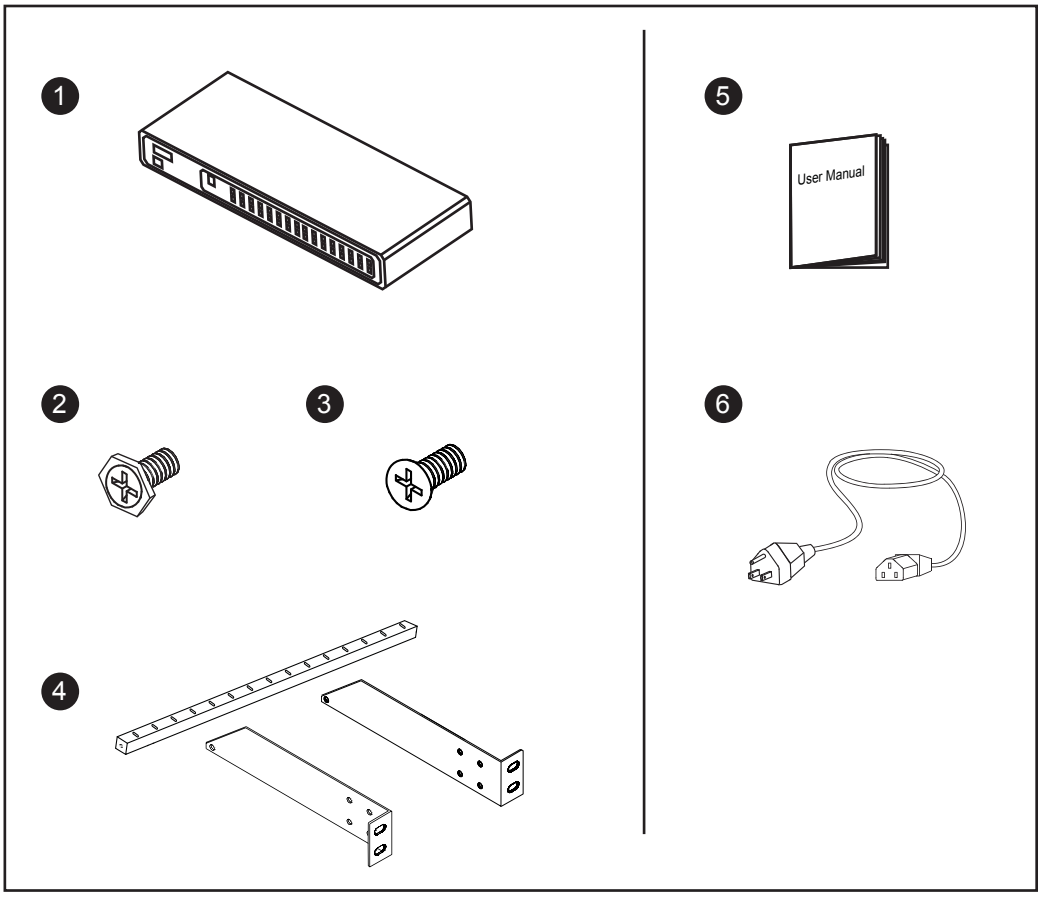

① KVM switch x 1 pc

② Screw M3.2 x 4.5mm x 4 pcs

③ Screw M4 x 10mm x 8 pcs

④ Bracket x 1 set

⑤ User manual x 1 pc

⑥ Power cord x 1 pc

Connection

U-801

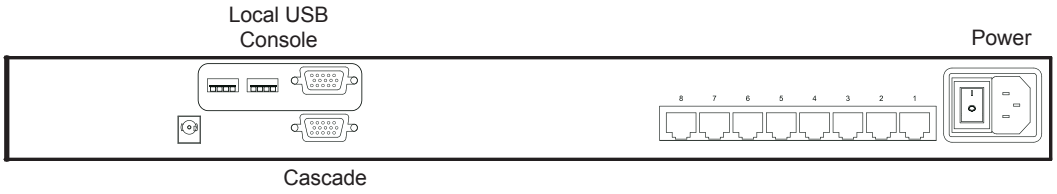

U-1601

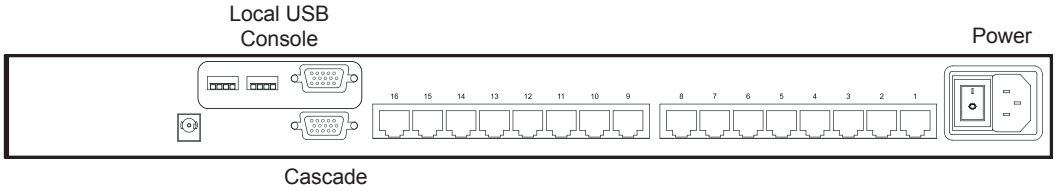

U-3201

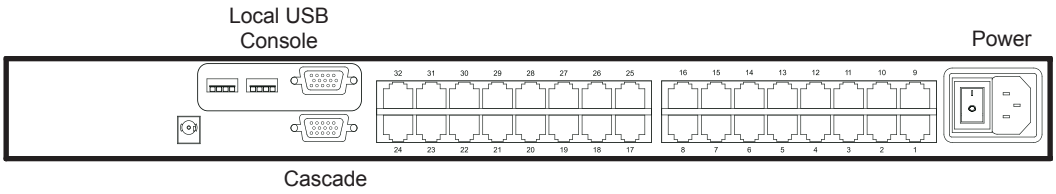

Connection
Rackmount KVM

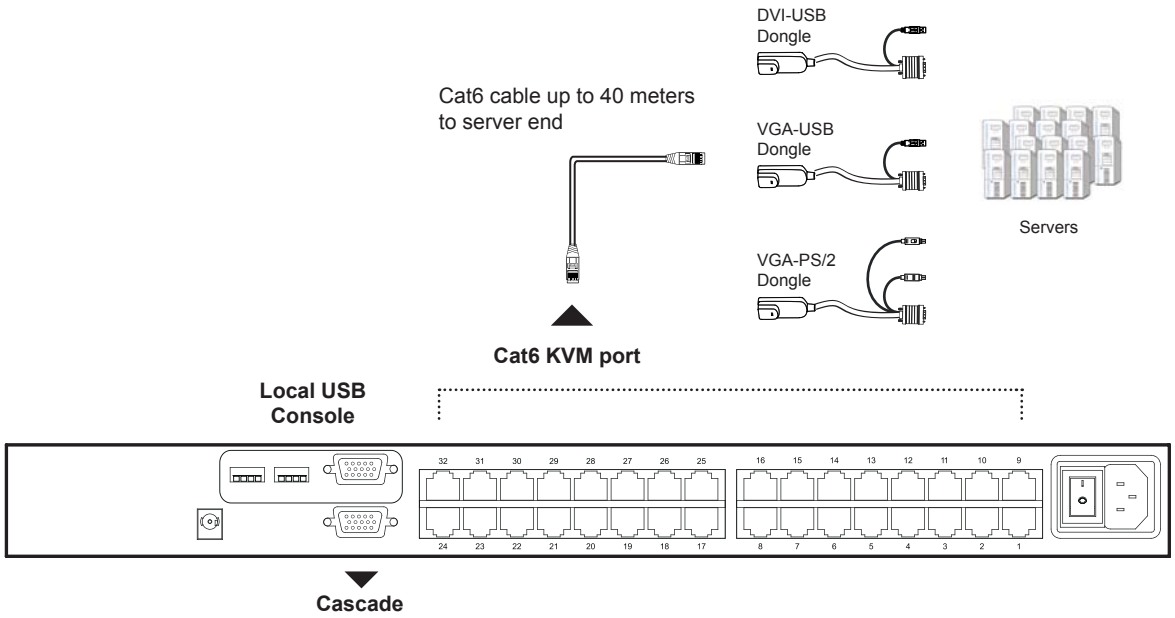

Connection
KVM modules

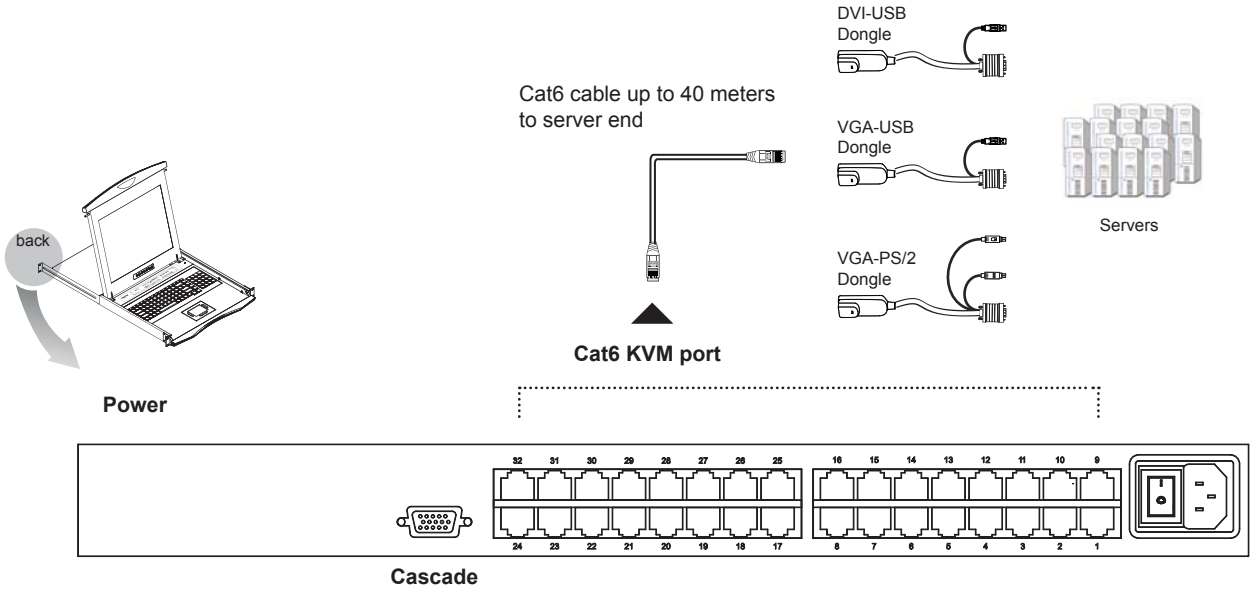

Cascade

- Cascade up to 8 levels, 256 servers
- Interconnection with Combo DB-15 KVM
- Cascading multiple KVM by CBC-6 cable.

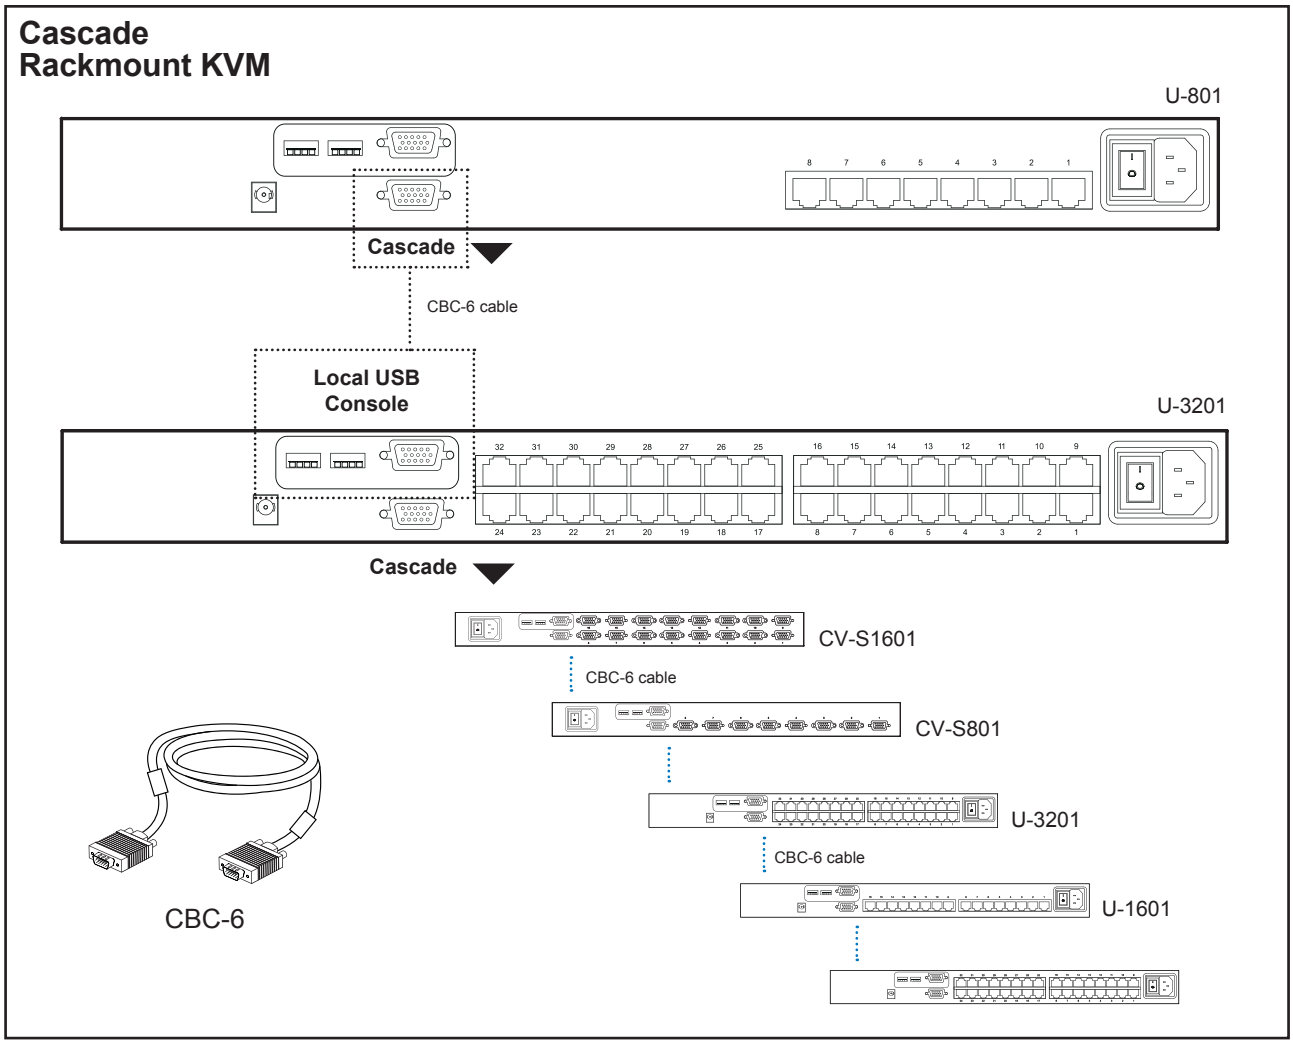

Cascade

- Cascade up to 8 levels, 64 servers
- Interconnection with Combo DB-15 KVM
- Cascading multiple KVM by CBC-6 cable.

Cascade
KVM modules

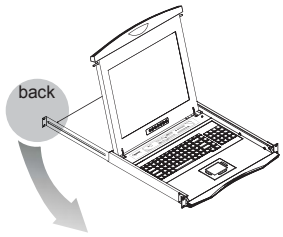

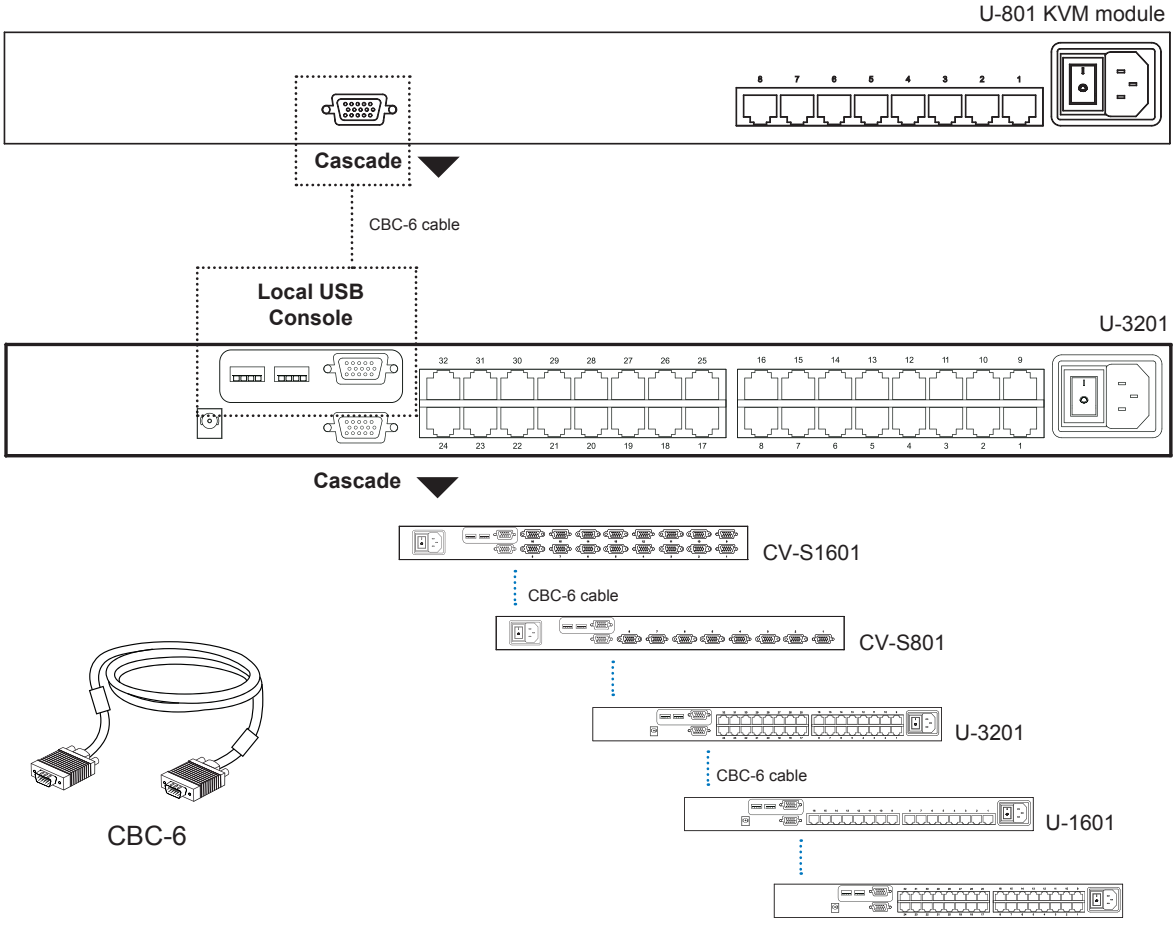

CBC-6

Package Content (only for rackmount KVM)

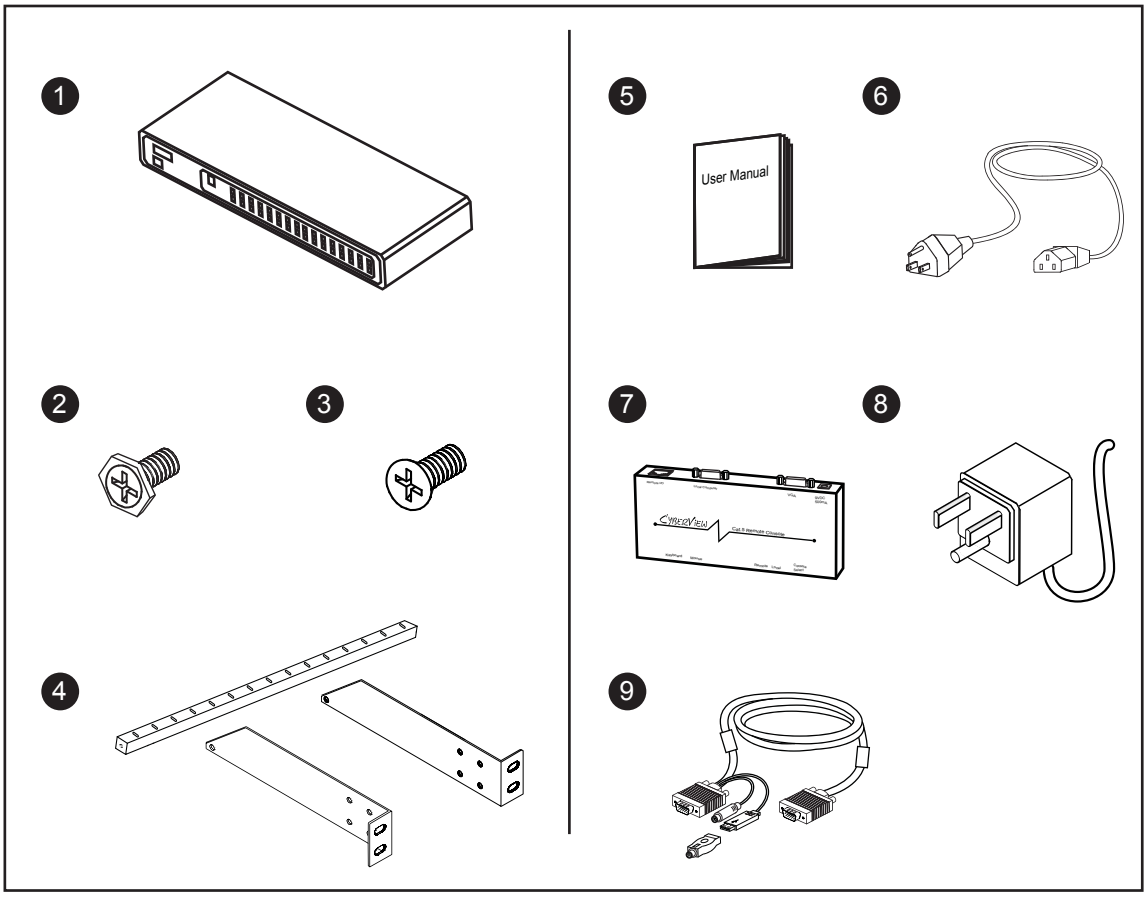

① KVM switch x 1 pc

② Screw M3.2 x 4.5mm x 4 pcs

③ Screw M4 x 10mm x 8 pcs

④ Bracket x 1 set

⑤ User manual x 1 pc

⑥ Power cord x 1 pc

⑦ Receiver x 1 set

⑧ 12V Power adapter (for receiver)

⑨ CE-6 Combo 4-in-1 KVM cable (for receiver)

Connection

U-802

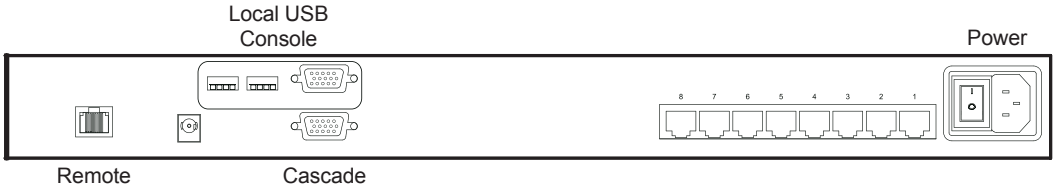

U-1602

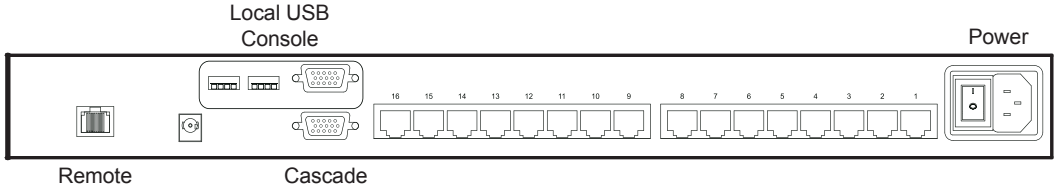

U-3202

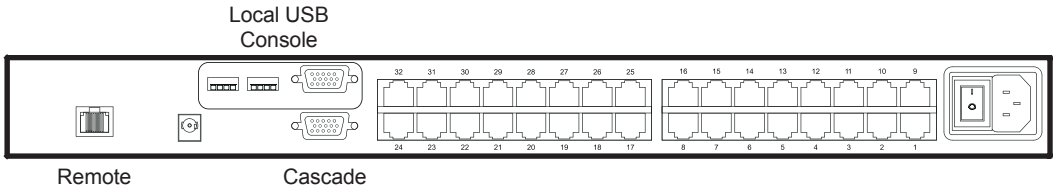

Connection
Rackmount KVM

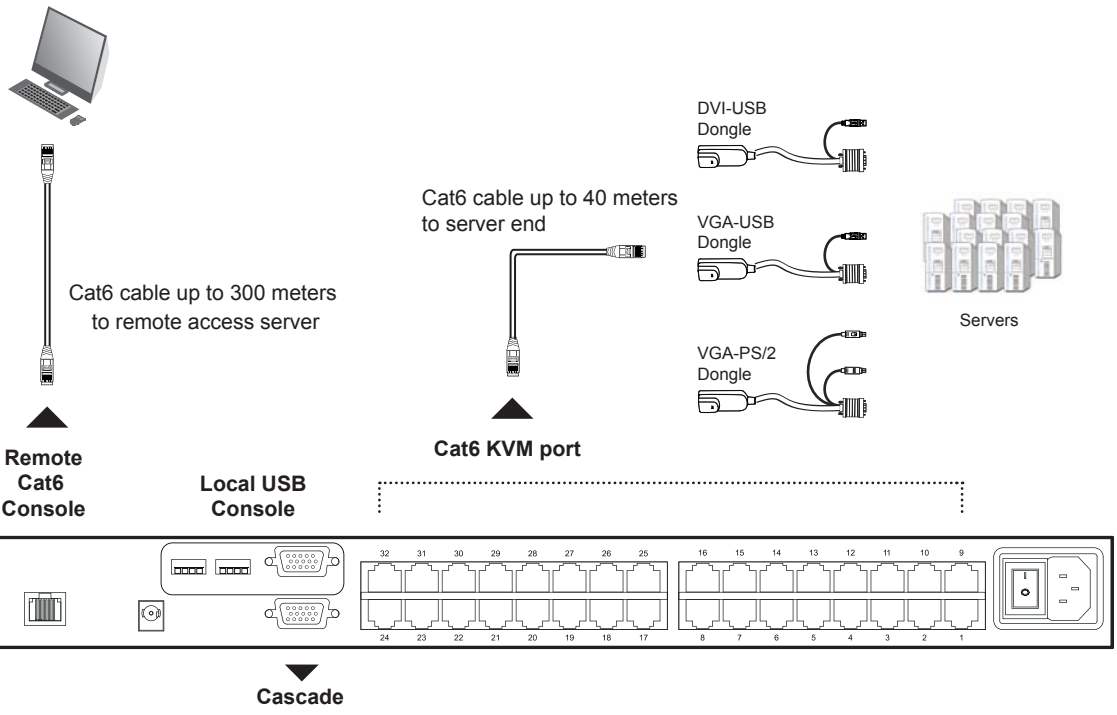

Connection
KVM modules

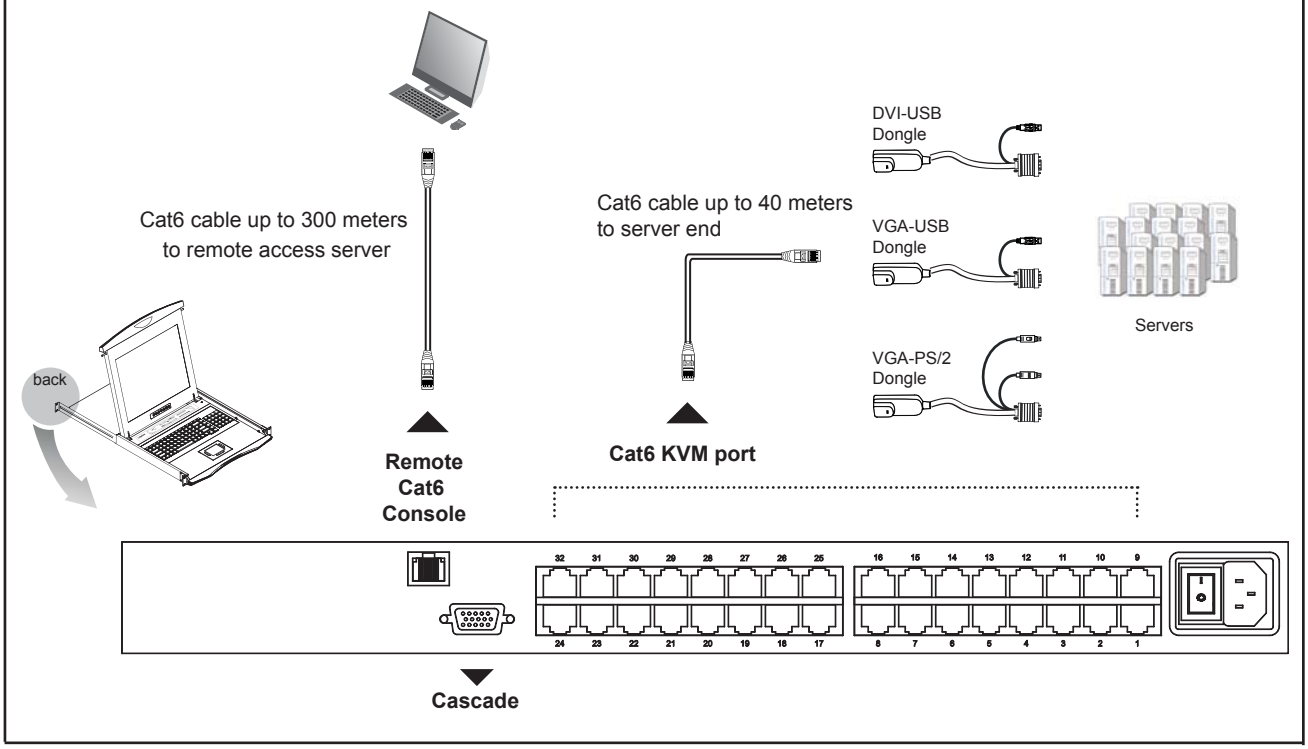

Receiver

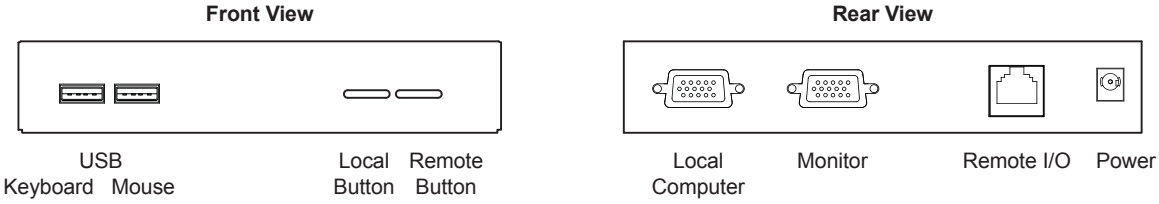

Receiver Connection

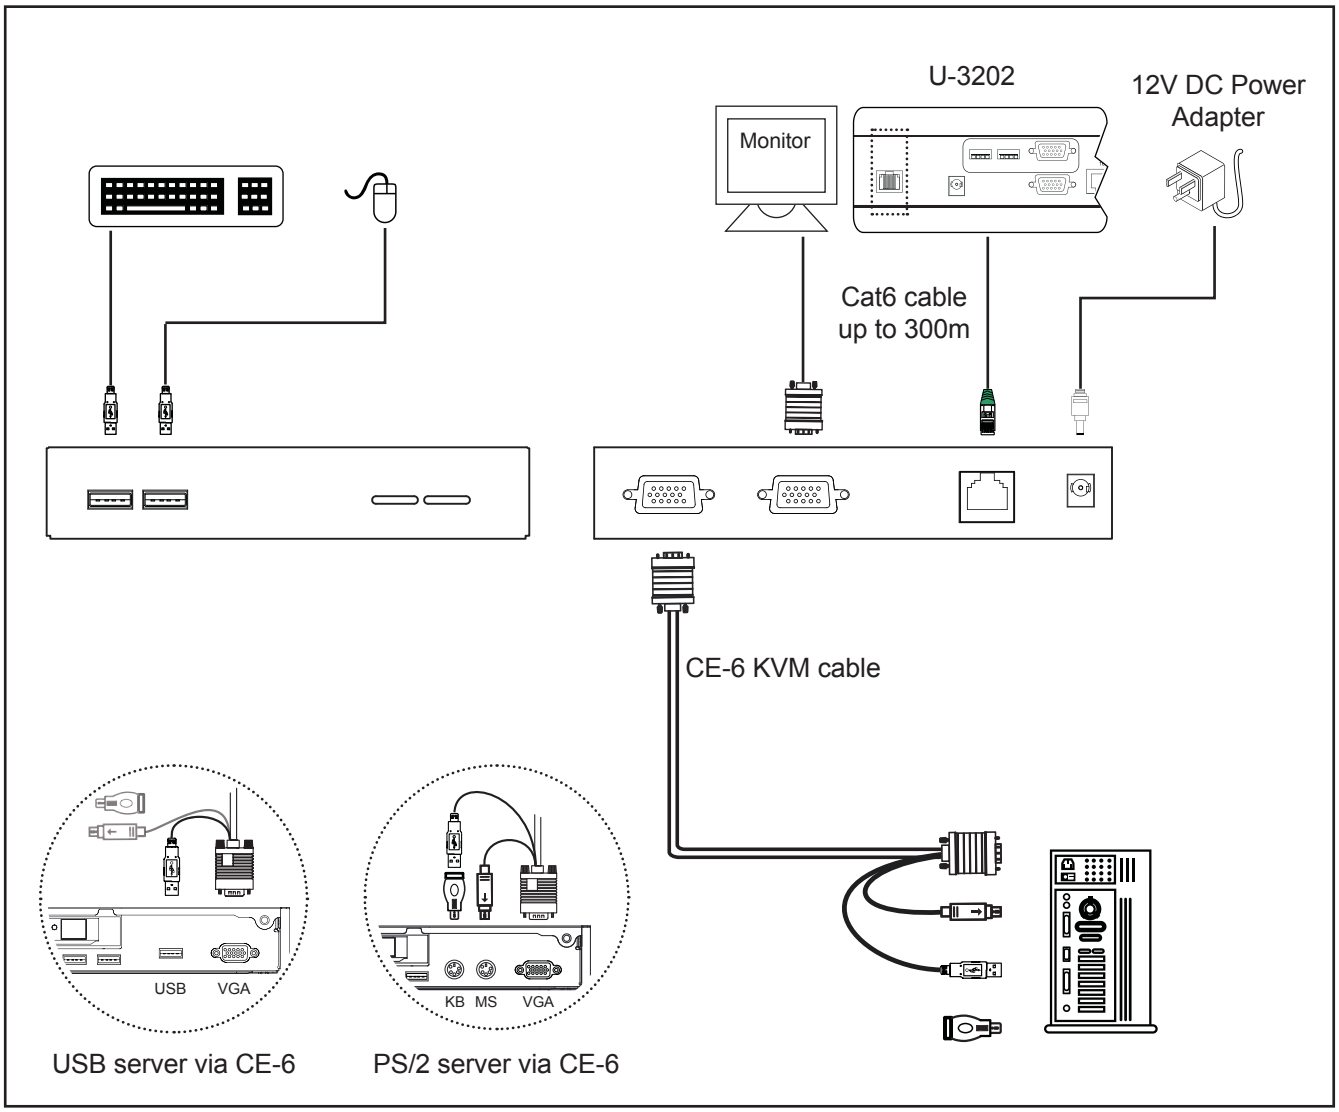

Cascade

- Cascade up to 8 levels, 256 servers
- Interconnection with Combo DB-15 KVM
- Cascading multiple KVM by CBC-6 cable.

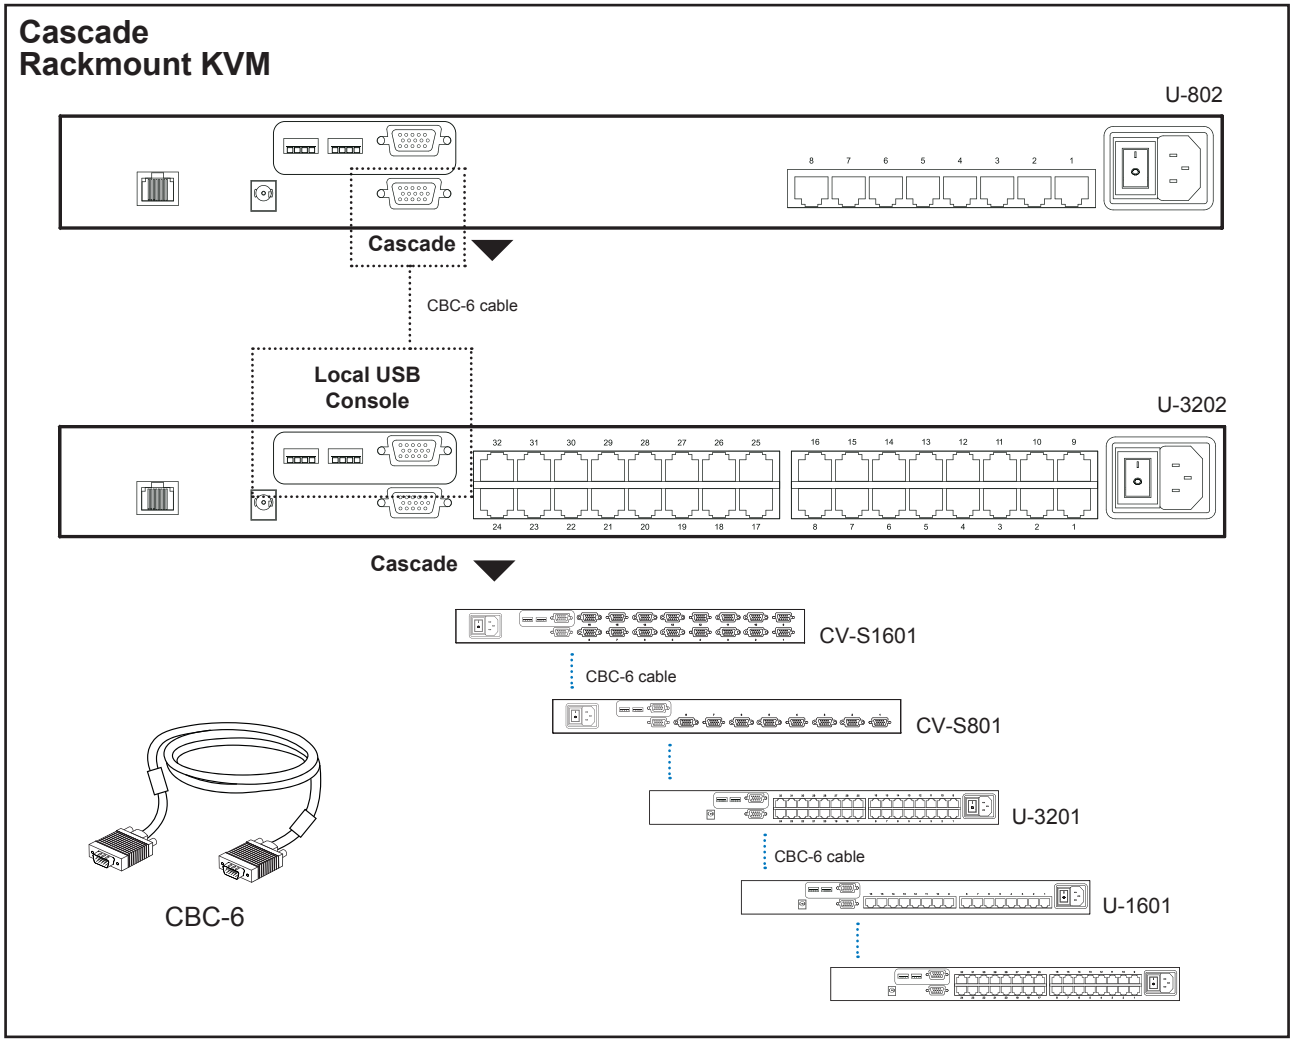

Cascade

- Cascade up to 8 levels, 256 servers
- Interconnection with Combo DB-15 KVM
- Cascading multiple KVM by CBC-6 cable.

Cascade
KVM modules

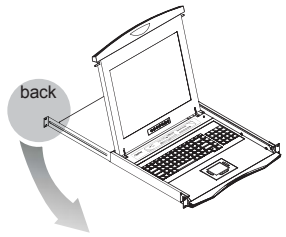

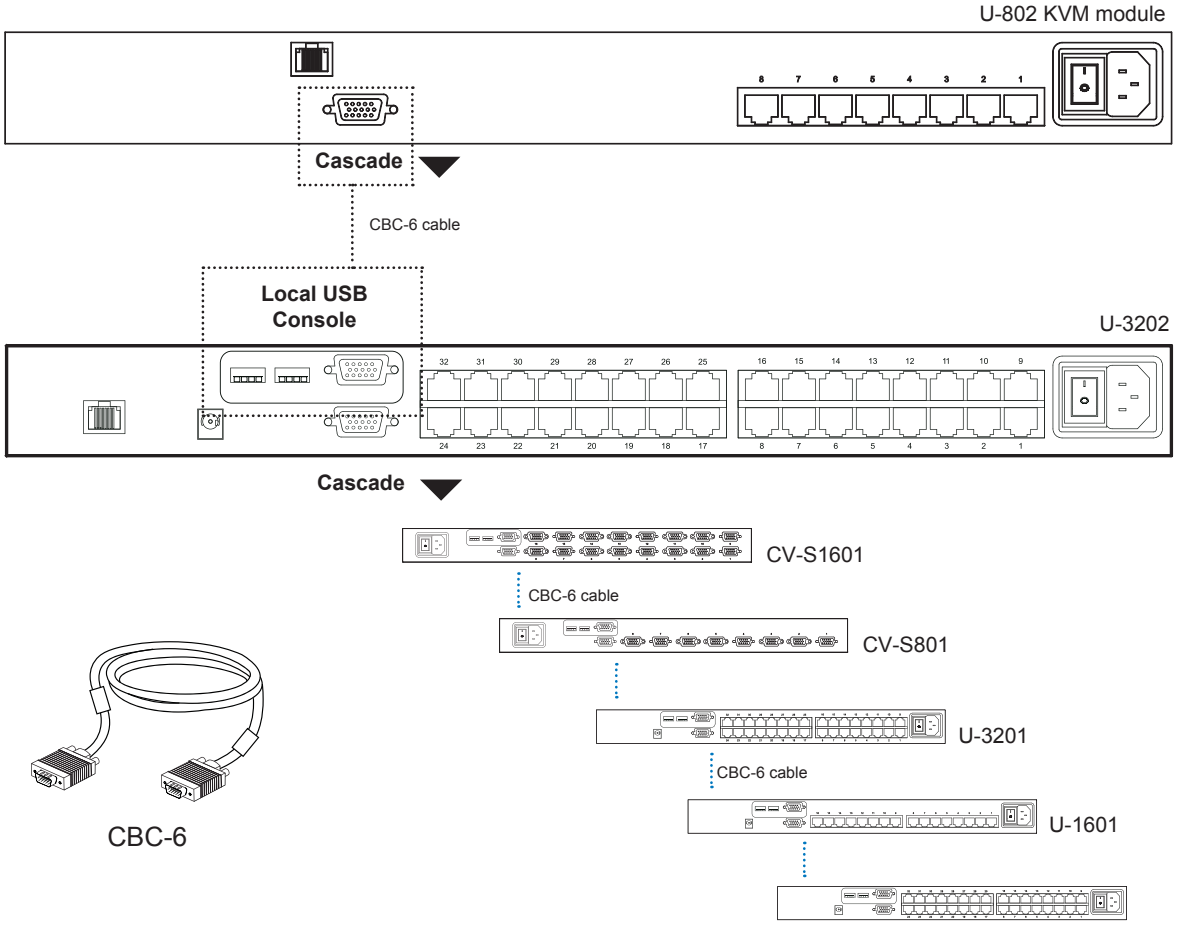

CBC-6

Package Content (only for rackmount KVM)

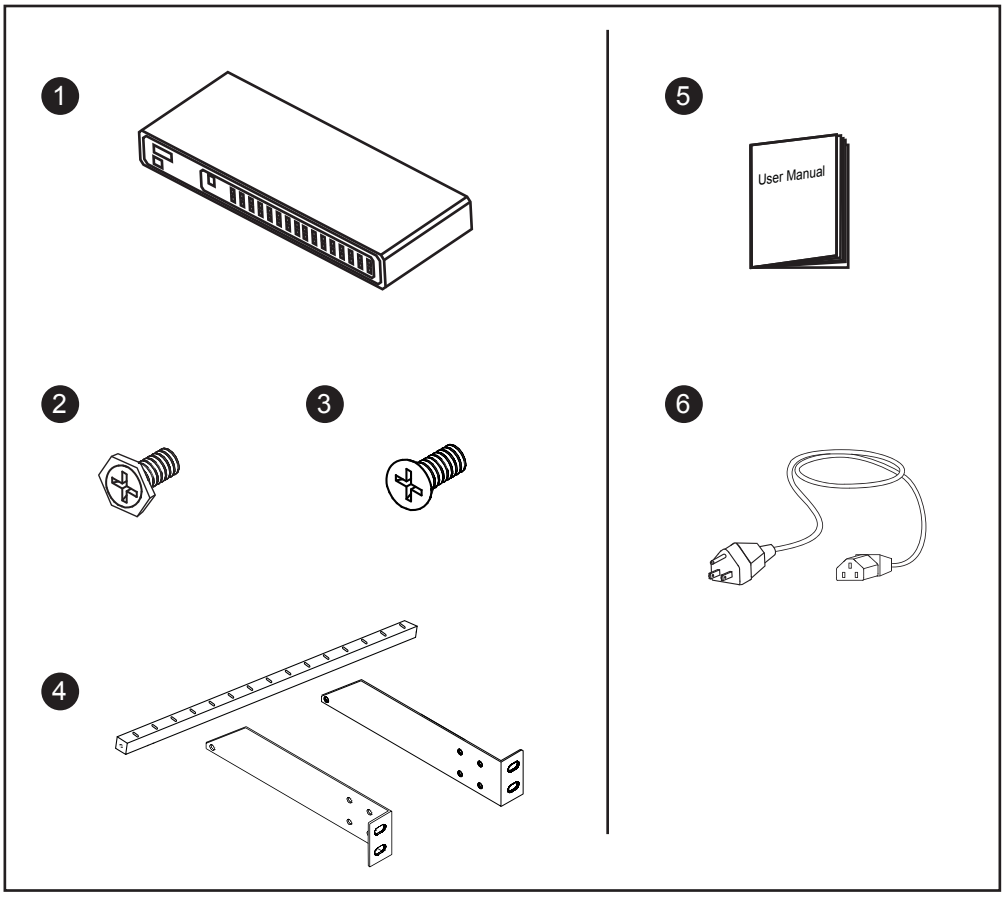

① KVM switch x 1 pc

② Screw M3.2 x 4.5mm x 4 pcs

③ Screw M4 x 10mm x 8 pcs

④ Bracket x 1 set

⑤ User manual x 2 pcs

⑥ Power cord x 1 pc

Connection

U-IP802

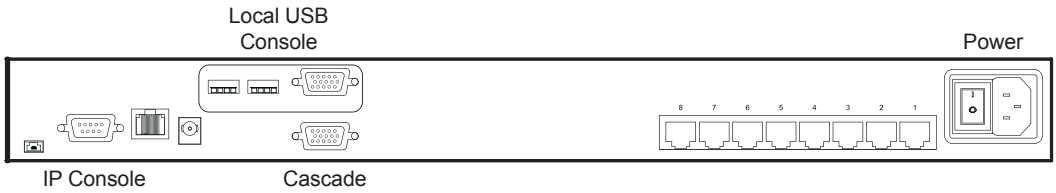

U-IP1602

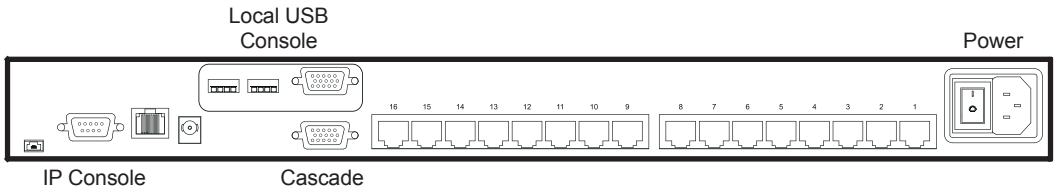

U-IP3202

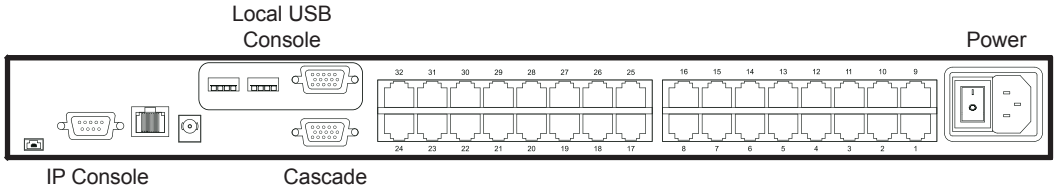

Connection
Rackmount KVM

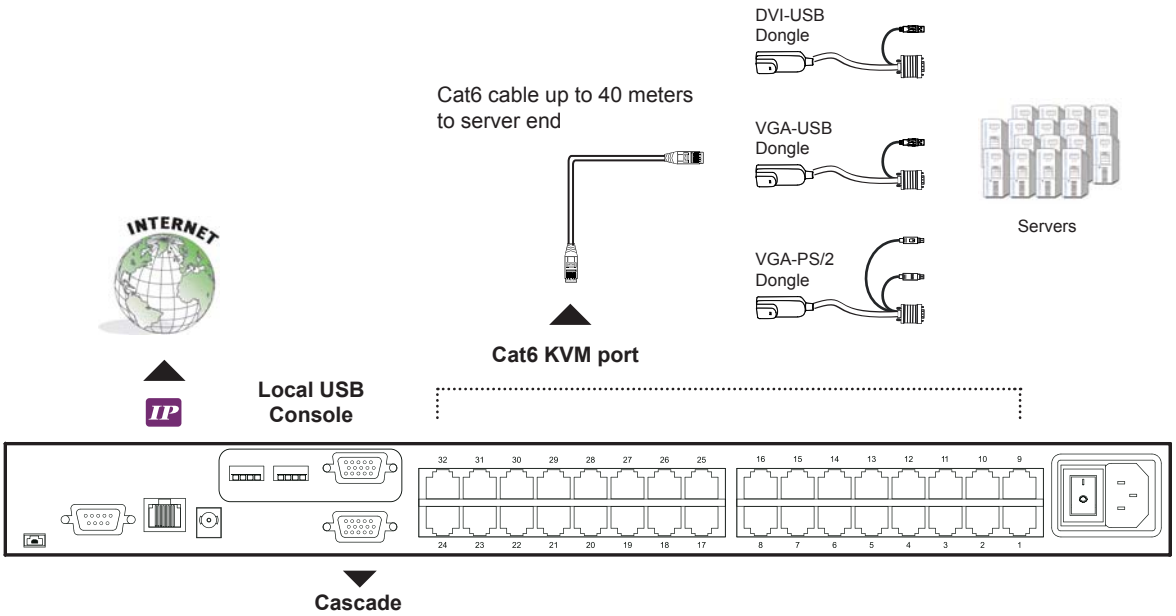

Connection
KVM modules

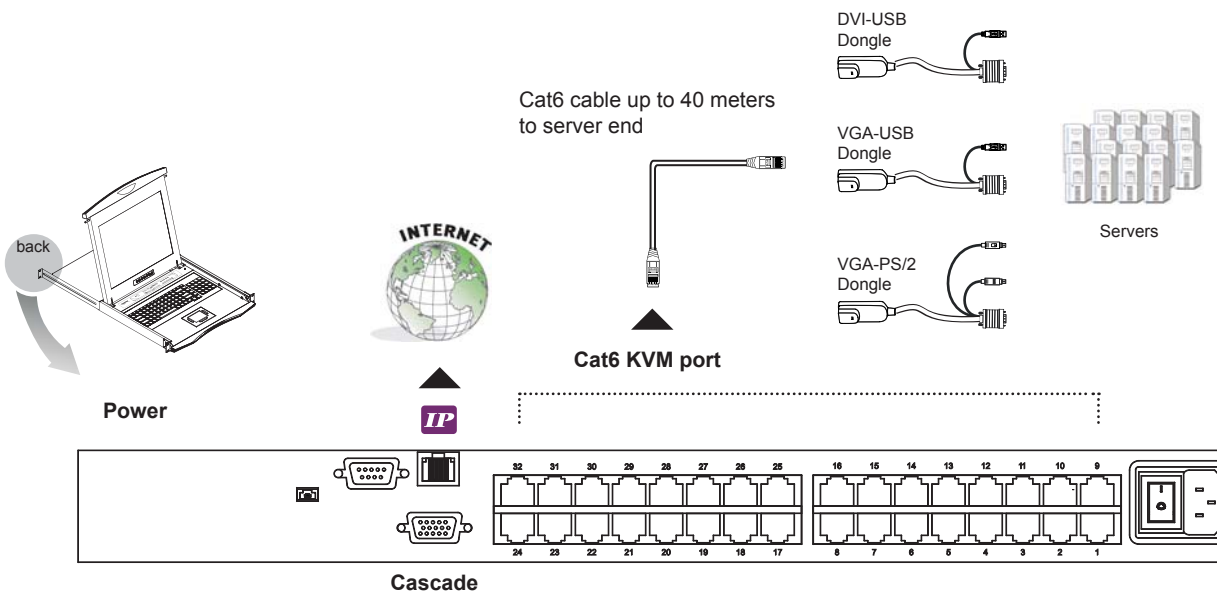

Cascade

- Cascade up to 8 levels, 256 servers
- Interconnection with Combo DB-15 KVM
- Cascading multiple KVM by CBC-6 cable.

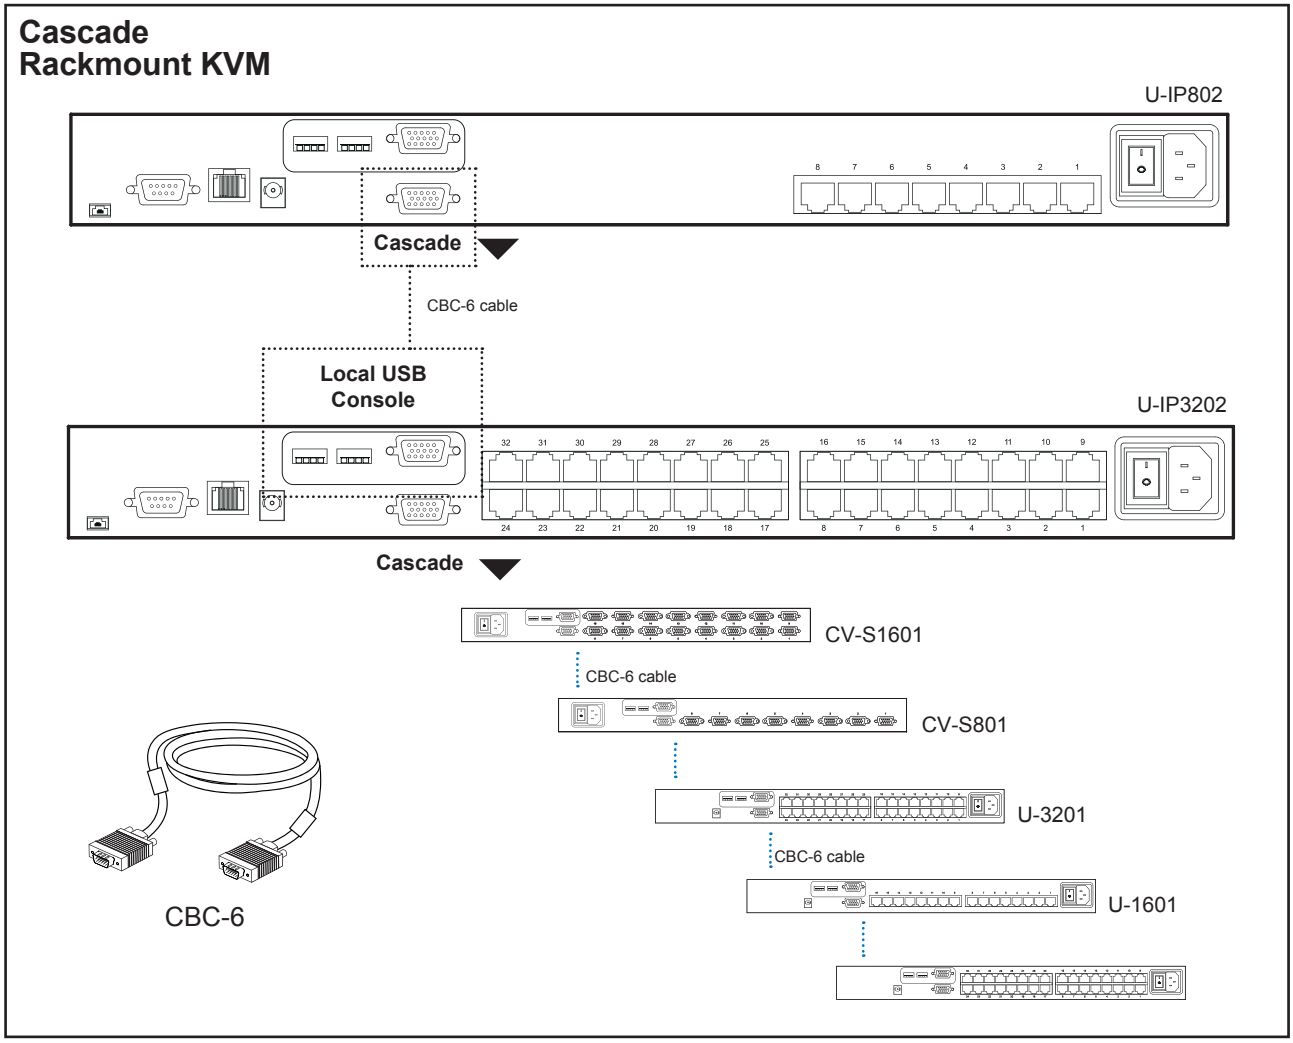

Cascade

- Cascade up to 8 levels, 256 servers
- Interconnection with Combo DB-15 KVM
- Cascading multiple KVM by CBC-6 cable.

Cascade
KVM modules

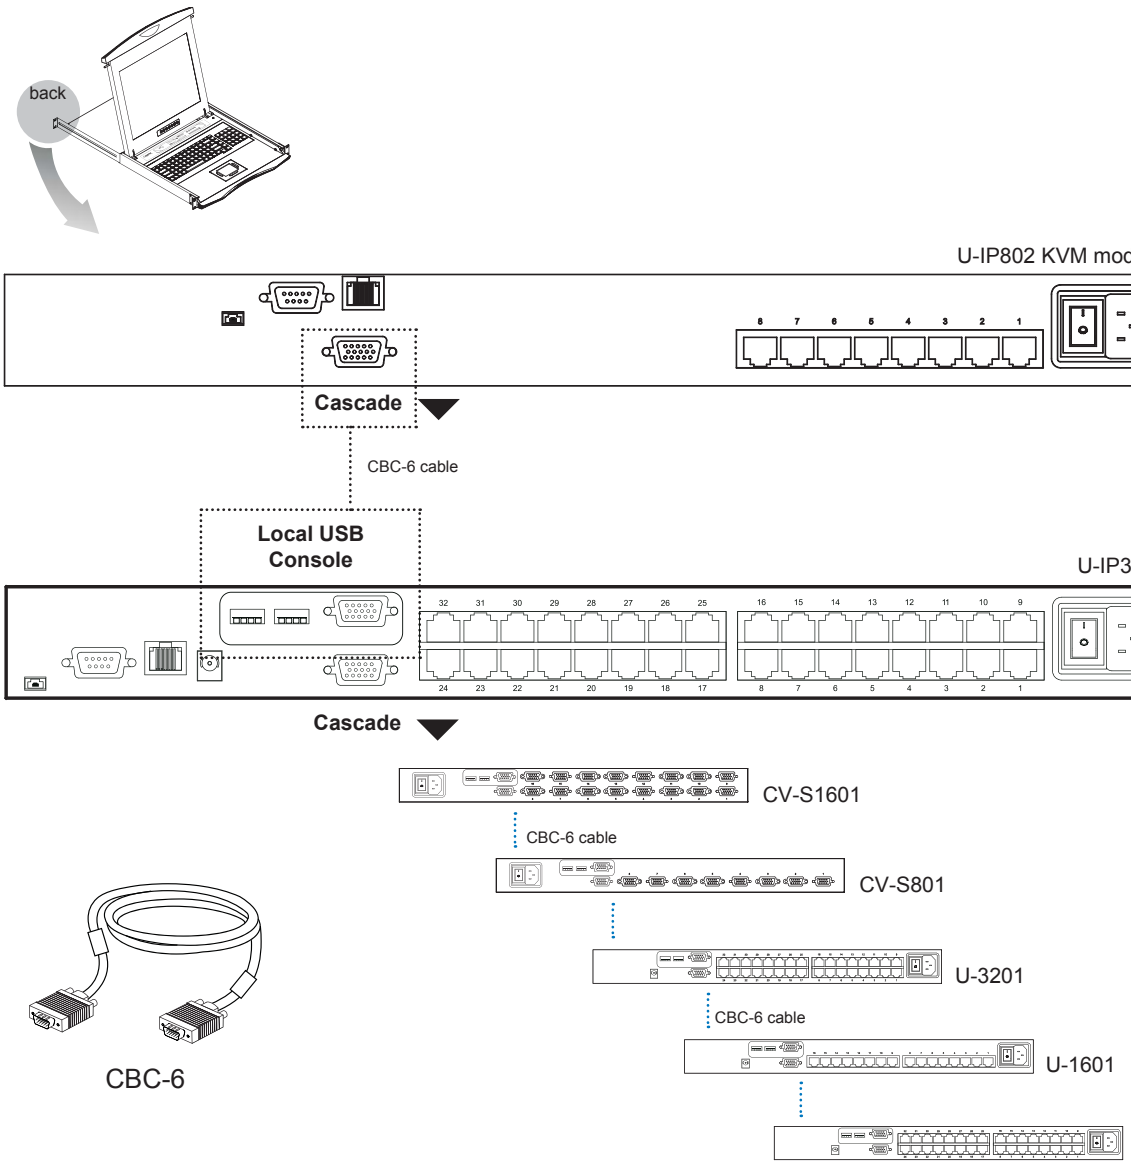

4.4 DG-100SD / DG-100S / DG-100 Dongle Connections

DG-100SD DVI-USB dongle

- To connect DVI-D connector to the computer's video card
- To connect USB connector to the computer's USB port

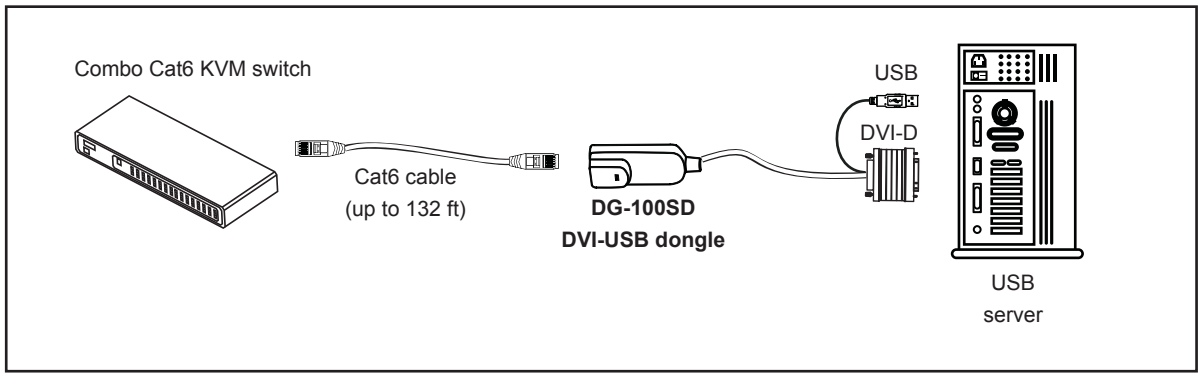

DG-100S VGA-USB dongle

- To connect DB-15 connector to the computer's video card
- To connect USB connector to the computer's USB port

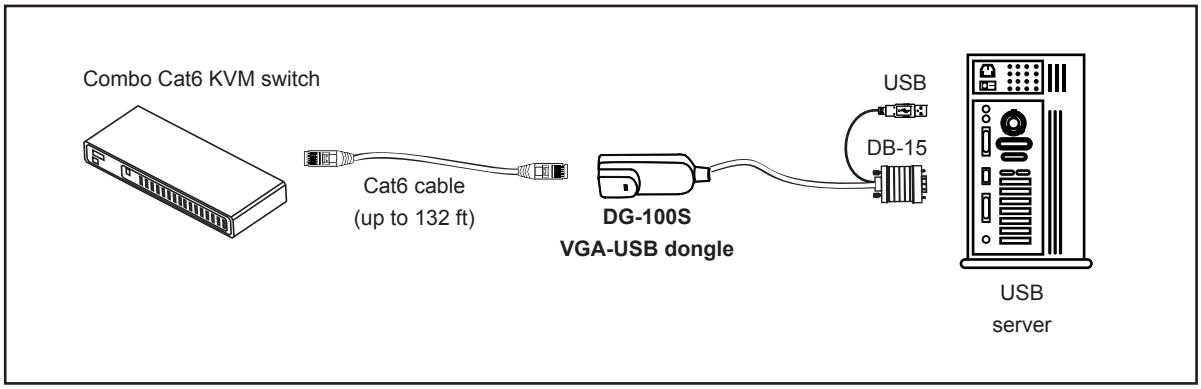

DG-100 VGA-PS/2 dongle

- To connect DB-15 connector to the computer's video card
- To connect keyboard connector to the computer's keyboard port
- To connect mouse connector to the computer's mouse port

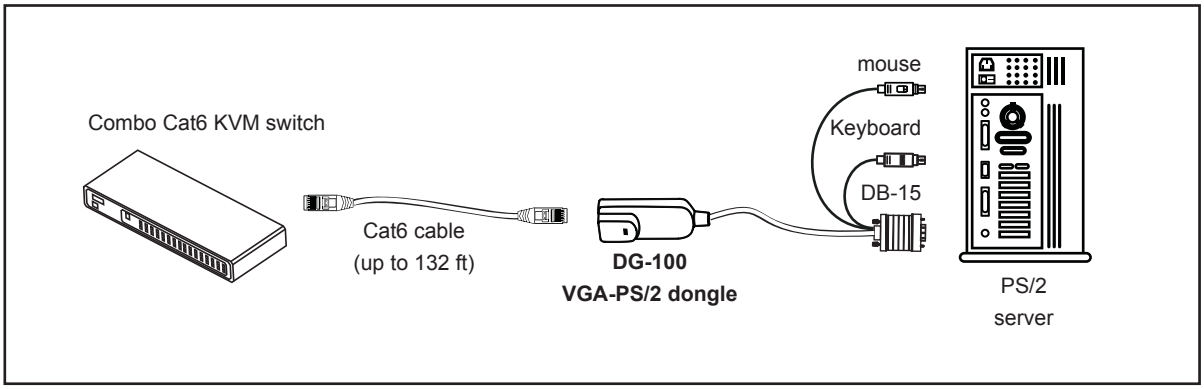

U-801 / U-1601 / U-3201	
■ **KVM Port**	
Number of ports:	8, 16 or 32
Connector:	RJ-45
Connectivity:	DVI-D / VGA connector dongle up to 40 meters (132 feet) Cat6 / Cat5 cable
■ **Local Console**	
Graphic connector:	1 x DB-15 VGA
Resolution:	Up to 1600 x 1200
Input device:	2 x USB type A for keyboard & mouse
■ **Management**	
Multilingual OSD:	English, France, German, Spanish, Italian, Russian, Simplified Chinese, Japanese
Hotkey combination:	Scroll-lock, Cap-lock, Num-lock, Alt, Ctrl & Win
Security:	Password enable & disable, up to 8 users profile for port access
PC Selection:	Front button, OSD menu & hotkey
■ **Expansion:**	Up to 256 servers by 8-level cascade
■ **Compatibility**	
Multi-platform:	Mix PCs, SUNs, IBMs, HPs, DELLs Server
Support:	Windows Vista / 2003 / XP / 2000, Linux, Netware, Unix
■ **Power**	
Input:	100 or 240V AC at 50 or 60 Hz via IEC type cord OR AC / DC power adapter 12V@3.3A (optional)
Option DC:	12V / 24V / 48V DC input
Consumption:	Max. 48 Watt, Standby 5 Watt
■ **Regulatory Approval:**	FCC, CE
■ **Environmental**	
Operating:	0 to 50°C
Storage:	-5 to 60°C
Relative humidity:	90%, non-condensing
Shock:	50G peak acceleration (11ms, half-sine wave)
Vibration:	58~100Hz / 0.98G (11ms / cycle)
■ **Product Information**	
Dimension (W x D x H):	446 x 180 x 44 mm / 17.6 x 7.1 x 1.7 inch
Net weight:	4 kg / 9 lb
■ **Packing Information**	
Dimension (W x D x H):	510 x 400 x 77 mm / 20.1 x 15.7 x 3 inch
Gross weight:	7 kg / 15 lb

U-802 / U-1602 / U-3202	
■ **KVM Port**	
Number of ports:	8, 16 or 32
Connector:	RJ-45
Connectivity:	DVI-D / VGA connector dongle up to 40 meters (132 feet) Cat6 / Cat5 cable
■ **Local Console**	
Graphic connector:	1 x DB-15 VGA
Resolution:	Up to 1600 x 1200
Input device:	2 x USB type A for keyboard & mouse
■ **Remote Console**	
Connector:	HDDB 15-pin, VGA
Resolution:	Up to 1600 x 1200 (500 feet), Up to 1024 x 768 (1000 feet)
Input device:	2 x USB type A for keyboard & mouse
Remote I/O:	RJ45 via Cat5 / Cat5e / Cat6 cable up to 1000 feet
Compensation:	Auto adjust for cable length
■ **Expansion:**	Up to 256 servers by 8-level cascade
■ **Compatibility**	
Multi-platform:	Mix PCs, SUNs, IBMs, HPs, DELLs Server
Support:	Windows Vista / 2003 / XP / 2000, Linux, Netware, Unix, DOS
■ **Power**	
Input:	100 or 240V AC at 50 or 60 Hz via IEC type cord OR AC / DC power adapter 12V@3.3A (optional)
Option DC:	12V / 24V / 48V DC input
Consumption:	Max. 48 Watt, Standby 5 Watt
■ **Regulatory Approval:**	FCC, CE
■ **Environmental**	
Operating:	0 to 50°C
Storage:	-5 to 60°C
Relative humidity:	90%, non-condensing
Shock:	50G peak acceleration (11ms, half-sine wave)
Vibration:	58~100Hz / 0.98G (11ms / cycle)
■ **Product Information**	
Dimension (W x D x H):	446 x 180 x 44 mm / 17.6 x 7.1 x 1.7 inch
Net weight:	4 kg / 9 lb
■ **Packing Information**	
Dimension (W x D x H):	510 x 400 x 77 mm / 20.1 x 15.7 x 3 inch
Gross weight:	7 kg / 15 lb

UIP-802 / UIP-1602 / UIP-3202		
■	**KVM Port**	
	Number of ports:	8, 16 or 32
	Connector:	RJ-45
	Connectivity:	DVI-D / VGA connector dongle up to 40 meters (132 feet) Cat6 / Cat5 cable
■	**Local Console**	
	Graphic connector:	1 x DB-15 VGA
	Resolution:	Up to 1600 x 1200
	Input device:	2 x USB type A for keyboard & mouse
■	**IP Remote Console**	
	Connector:	RJ45 Ethernet
	User management:	15-user login, 1 x active user
	Network protocol:	DHCP / BOOTP / DNS
	Security:	SSL v3, RSA, AES, HTTP / HTTPs, CSR
	Resolution:	Up to 1600 x 1200
	Browser:	IE, Firefox, Safari, Netscape
	Others:	Serial port, virtual media via USB
■	**Expansion:**	Up to 256 servers by 8-level cascade
■	**Compatibility**	
	Multi-platform:	Mix PCs, SUNs, IBMs, HPs, DELLs Server
	Support:	Windows Vista / 2003 / XP / 2000, Linux, Netware, Unix
■	**Power**	
	Input:	100 or 240V AC at 50 or 60 Hz via IEC type cord OR AC / DC power adapter 12V@3.3A (optional)
	Option DC:	12V / 24V / 48V DC input
	Consumption:	Max. 48 Watt, Standby 5 Watt
■	**Regulatory Approval:**	FCC, CE
■	**Environmental**	
	Operating:	0 to 50°C
	Storage:	-5 to 60°C
	Relative humidity:	90%, non-condensing
	Shock:	50G peak acceleration (11ms, half-sine wave)
	Vibration:	58~100Hz / 0.98G (11ms / cycle)
■	**Product Information**	
	Dimension (W x D x H):	446 x 180 x 44 mm / 17.6 x 7.1 x 1.7 inch
	Net weight:	4 kg / 9 lb
■	**Packing Information**	
	Dimension (W x D x H):	510 x 400 x 77 mm / 20.1 x 15.7 x 3 inch
	Gross weight:	7 kg / 15 lb

Package Content (only for rackmount KVM)

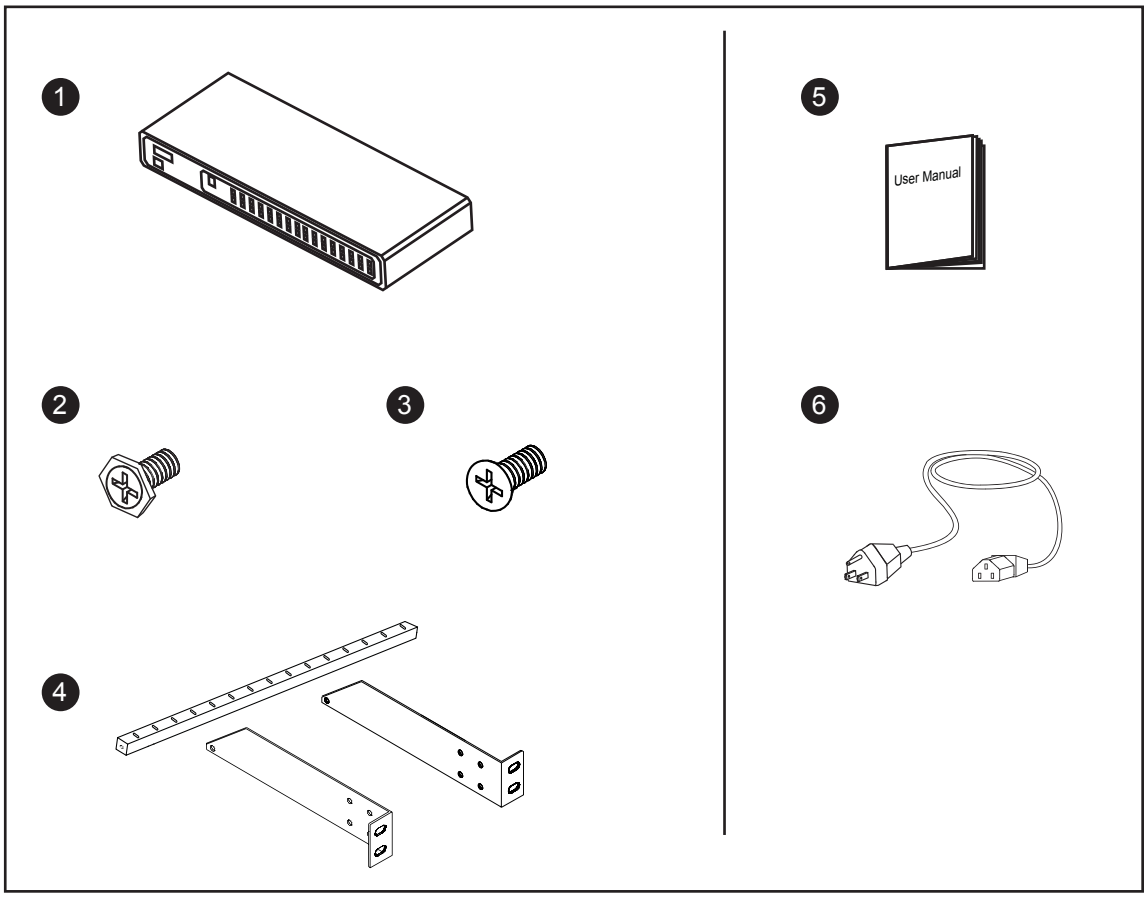

① KVM switch x 1 pc

② Screw M3.2 x 4.5mm x 4 pcs

③ Screw M4 x 10mm x 8 pcs

④ Bracket x 1 set

⑤ User manual x 1 pc

⑥ Power cord x 1 pc

5.1 CV-S801 / CV-S1601 Combo DB-15 KVM

Connection

CV-S801

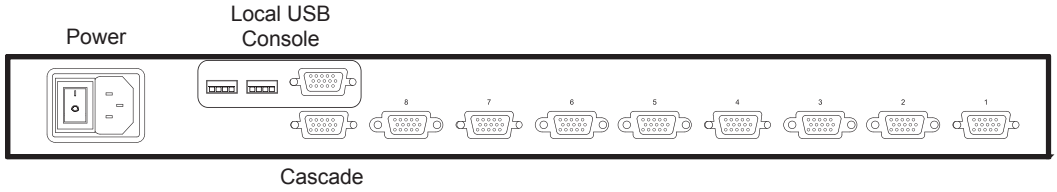

CV-S1601

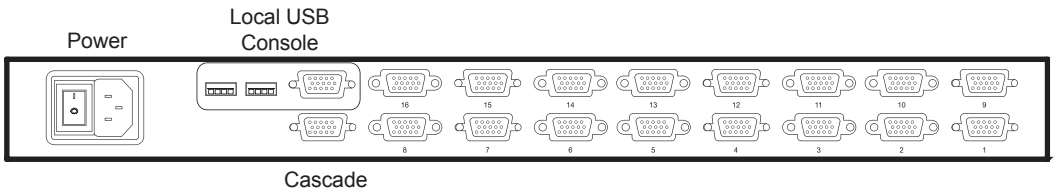

Connection
Rackmount KVM

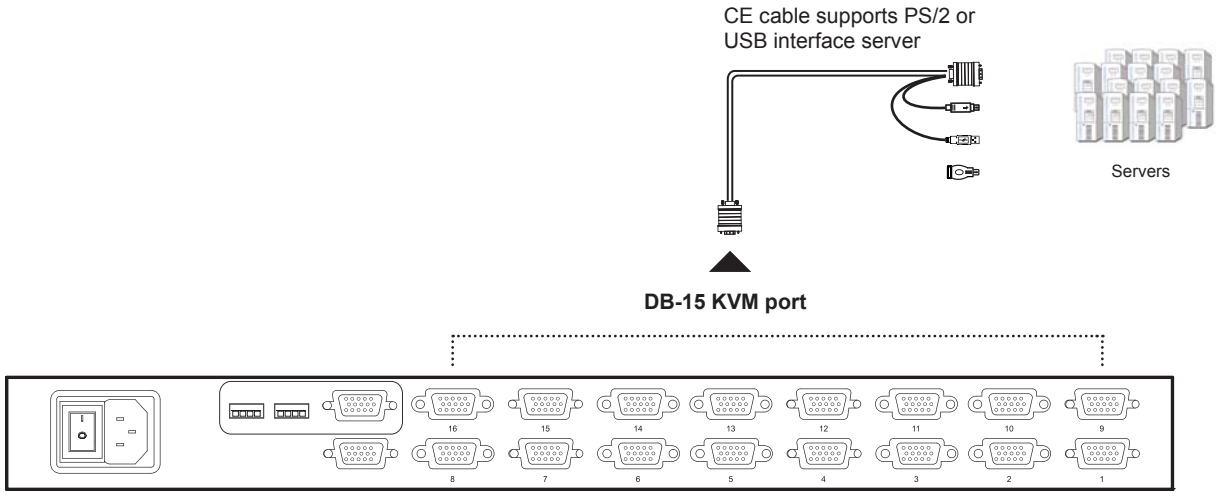

Connection
KVM modules

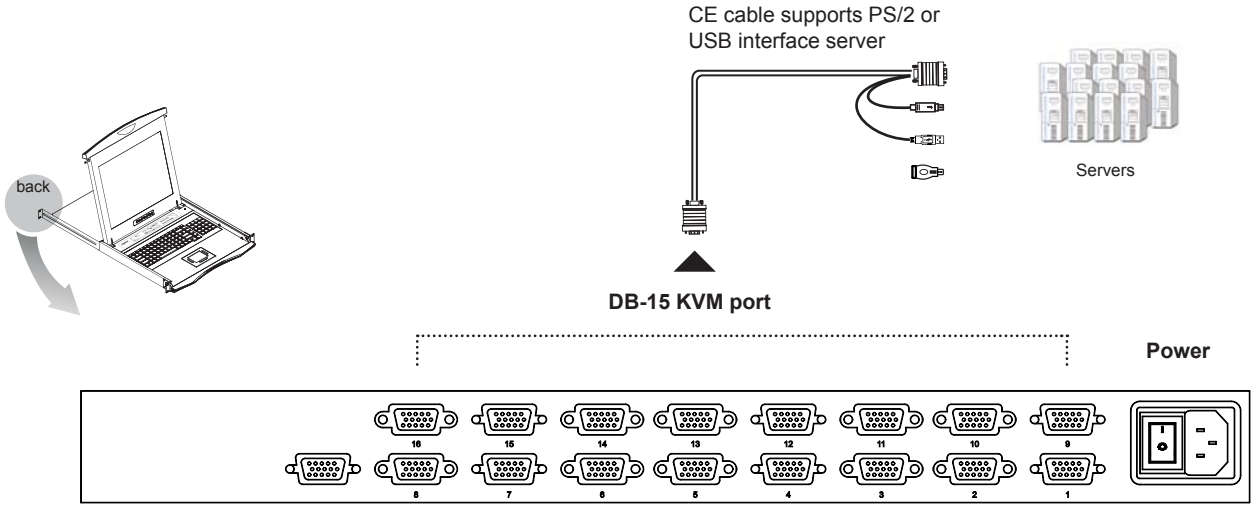

Connection
CE-6

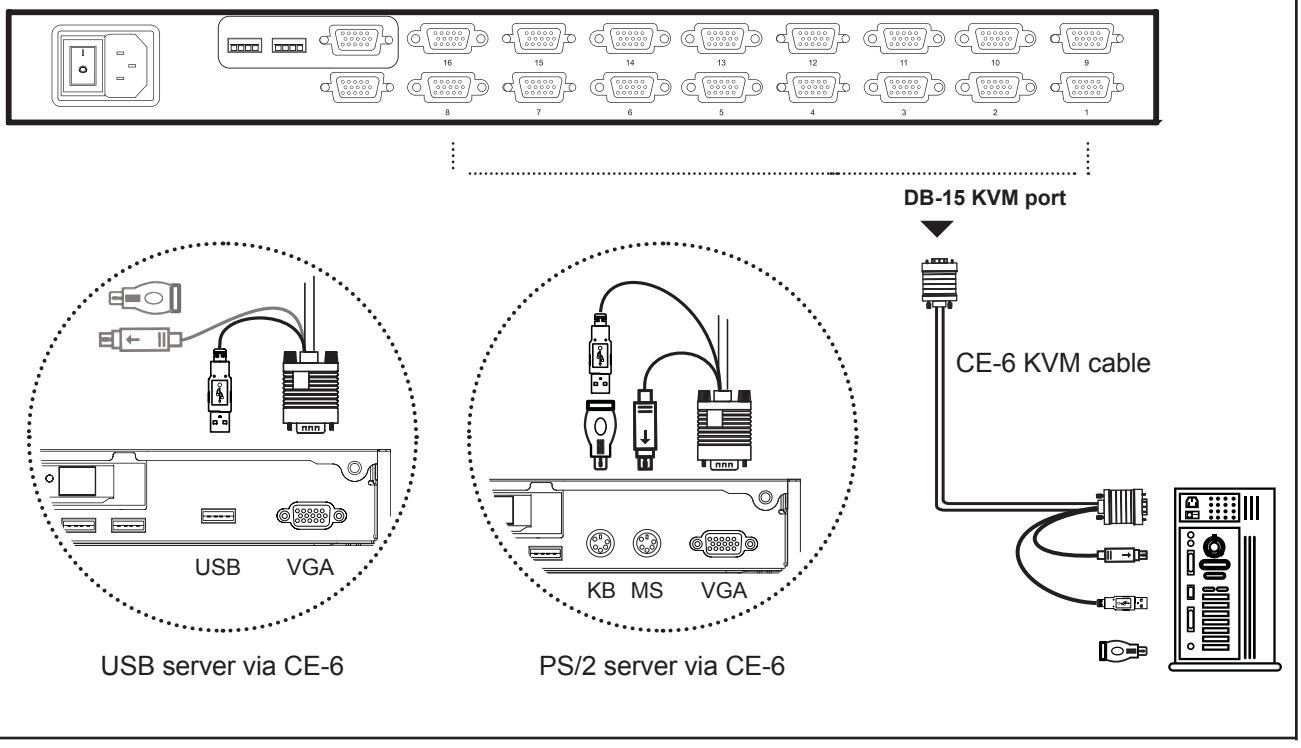

USB server via CE-6

PS/2 server via CE-6

Cascade

- Cascade up to 8 levels, 128 servers
- Interconnection with Combo Cat6 KVM
- Cascading multiple KVM by CBC-6 cable.

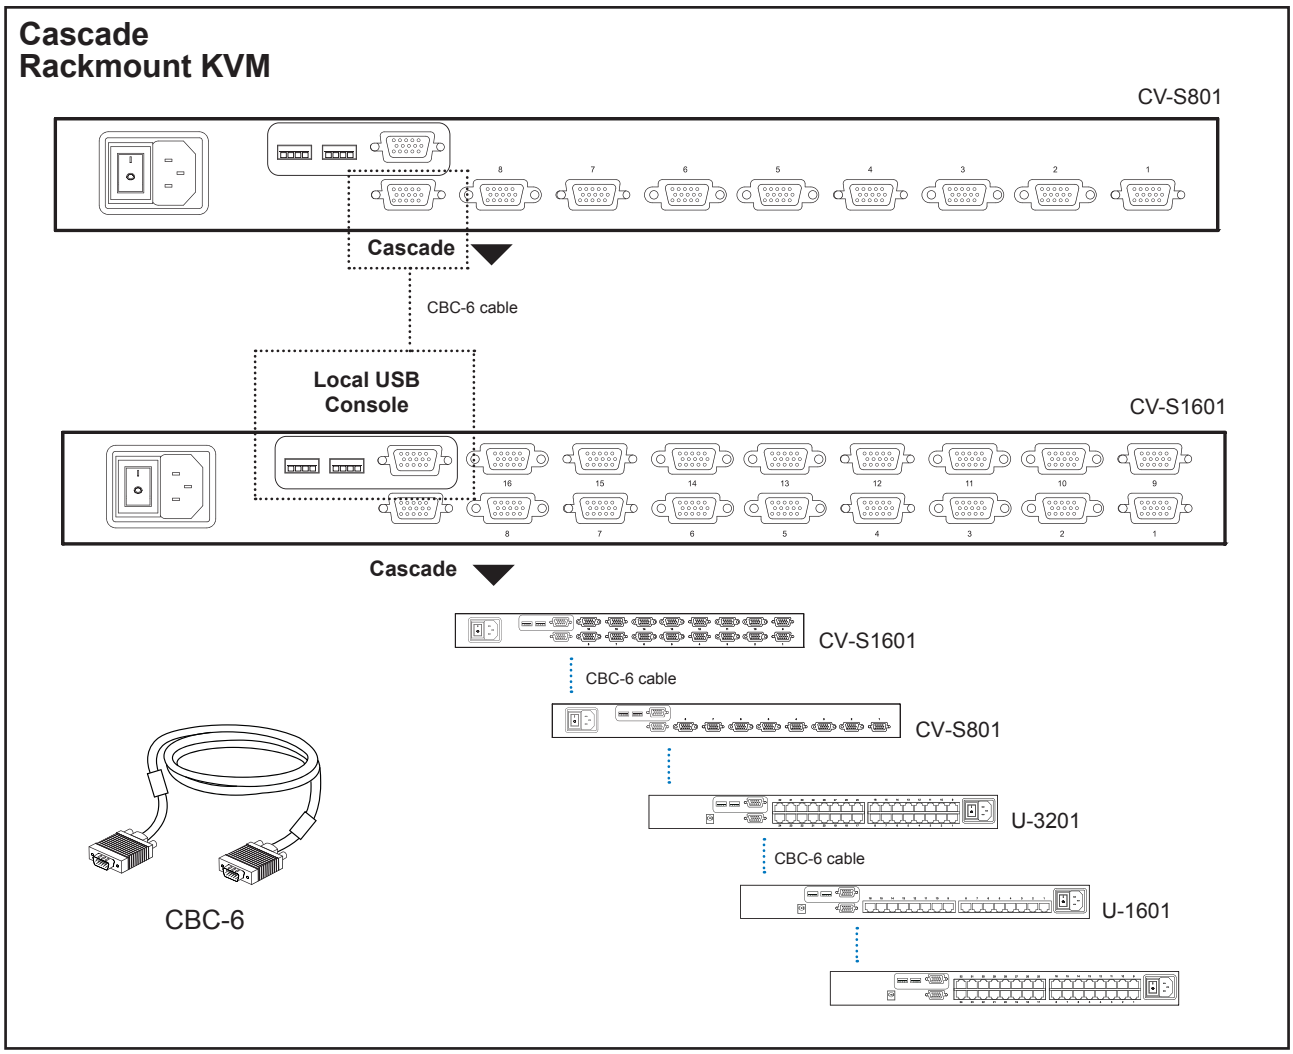

Cascade

- Cascade up to 8 levels, 128 servers
- Interconnection with Combo Cat6 KVM
- Cascading multiple KVM by CBC-6 cable.

Cascade
KVM modules

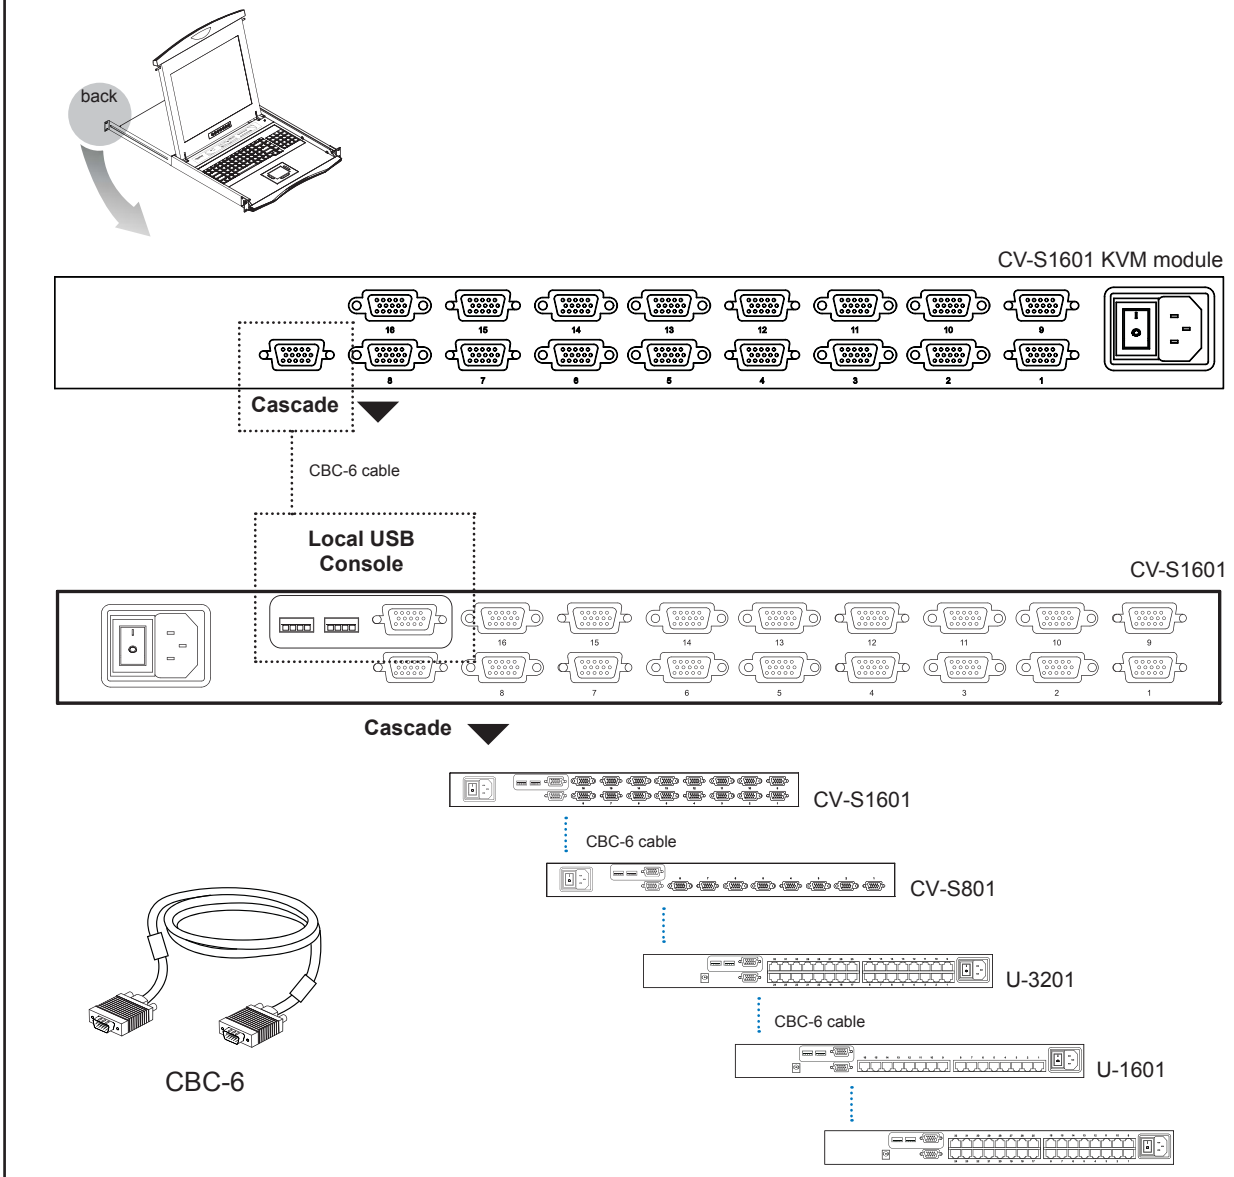

Package Content (only for rackmount KVM)

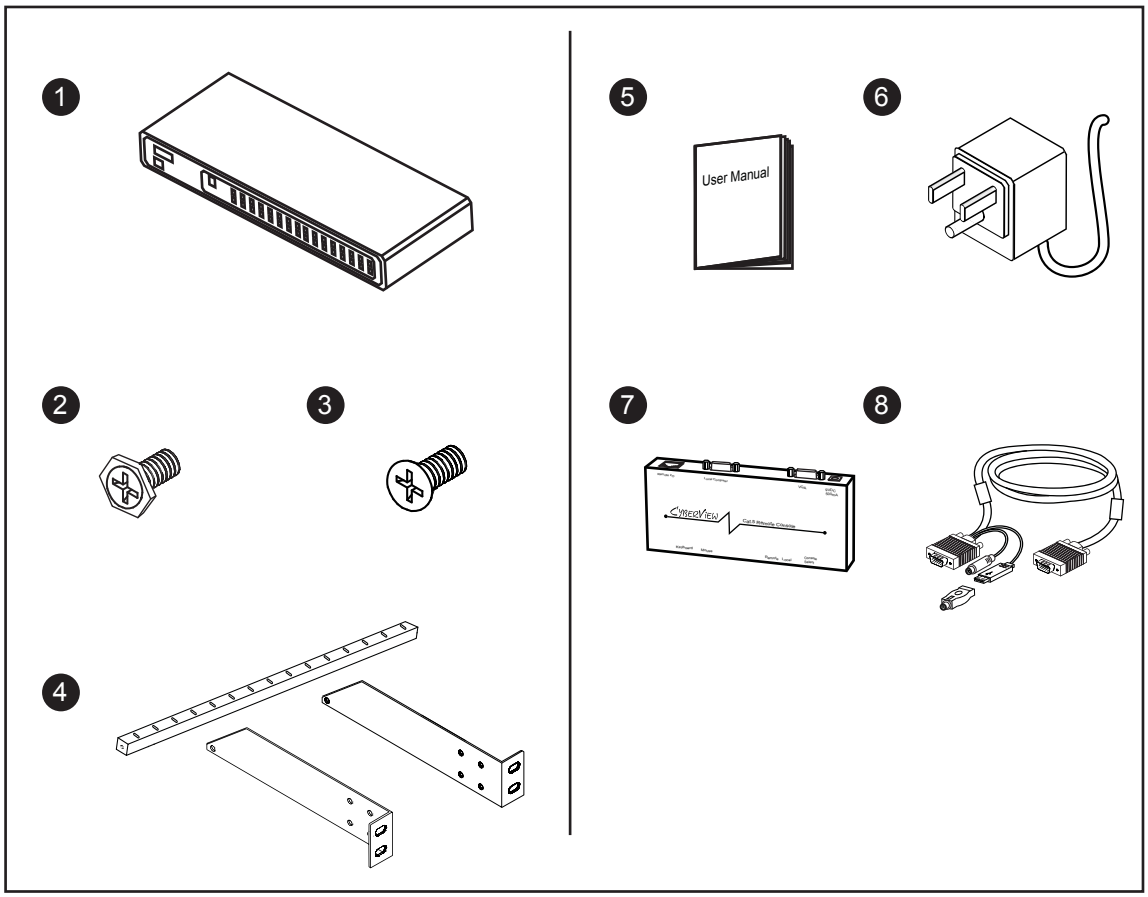

① KVM switch x 1 pc

② Screw M3.2 x 4.5mm x 4 pcs

③ Screw M4 x 10mm x 8 pcs

④ Bracket x 1 set

⑤ User manual x 1 pc

⑥ 12V Power adapter x 2 pcs

⑦ Receiver x 1 set

⑧ CE-6 Combo 4-in-1 KVM cable (for receiver)

Connection

CV-802

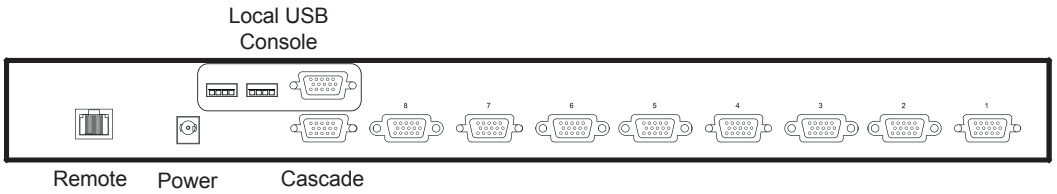

CV-1602

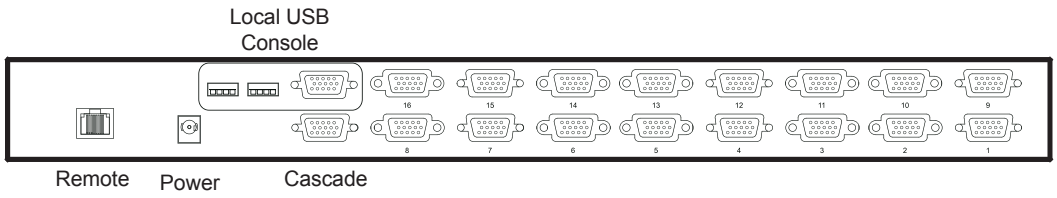

Connection
Rackmount KVM

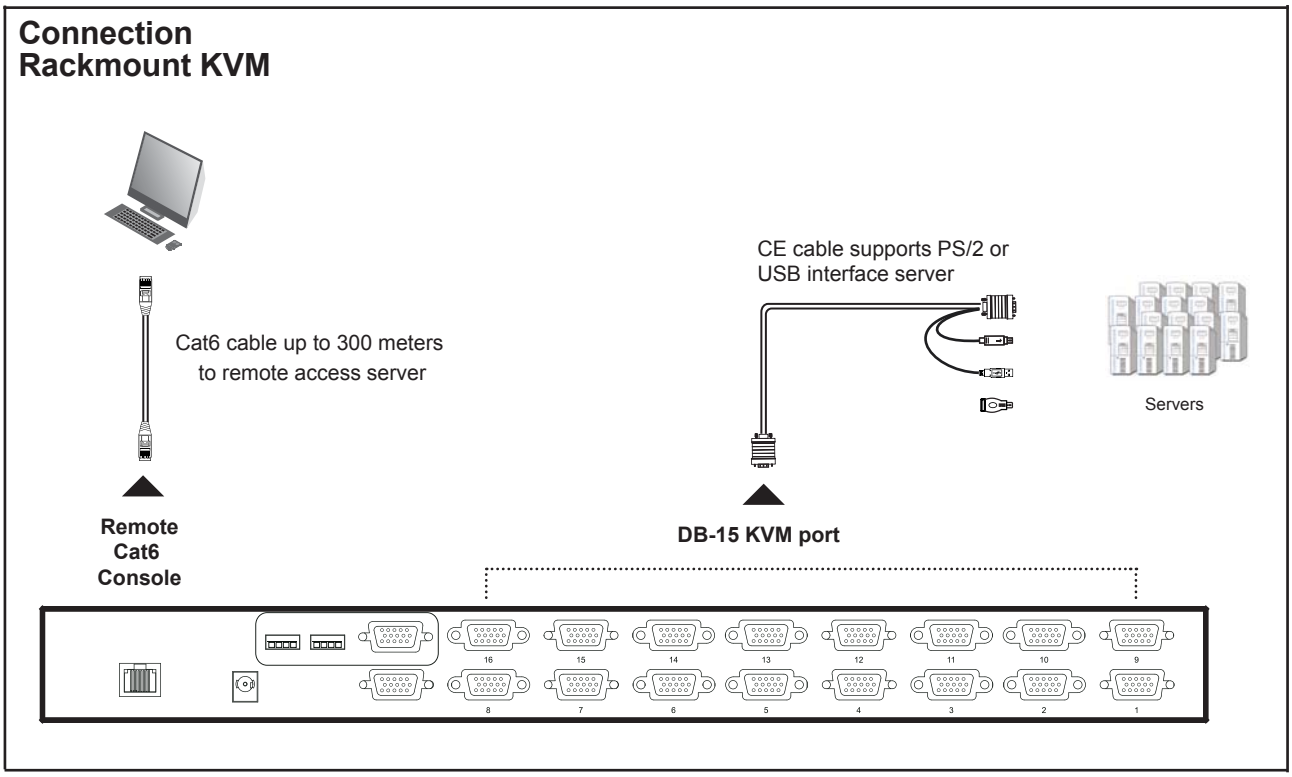

Connection
KVM modules

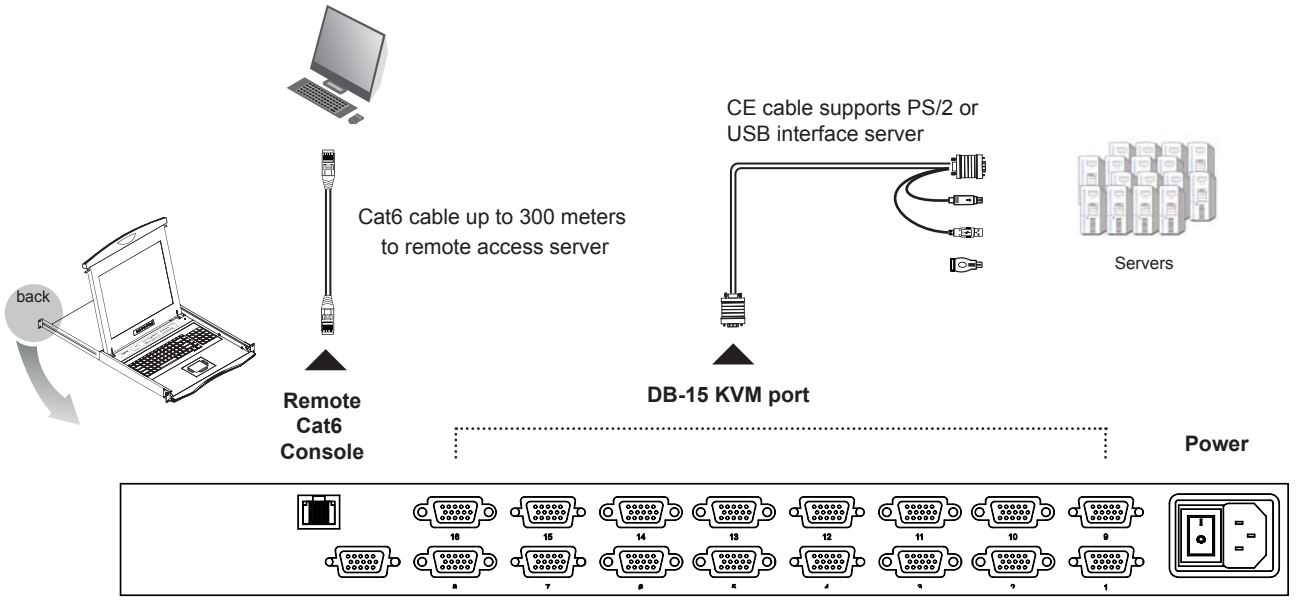

Connection
CE-6

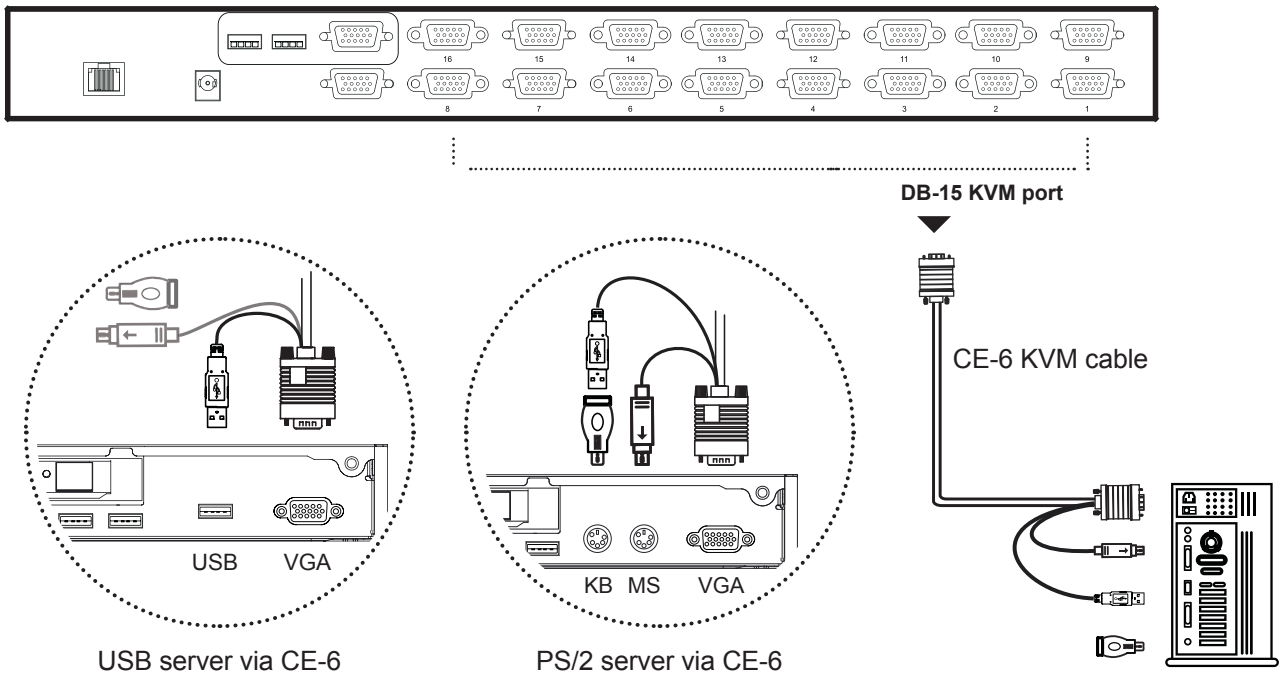

USB server via CE-6

PS/2 server via CE-6

5.2 CV-802 / CV-1602 Combo DB-15 KVM

Receiver

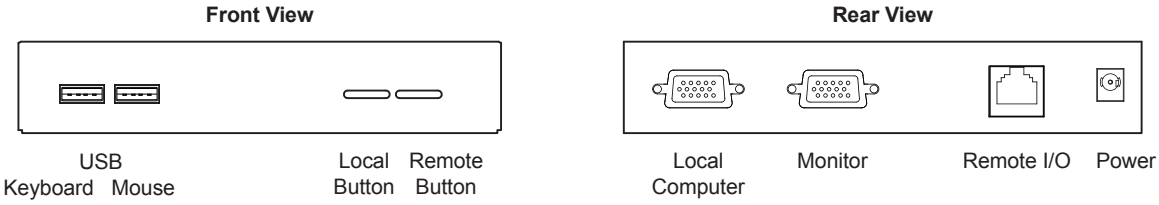

Receiver Connection

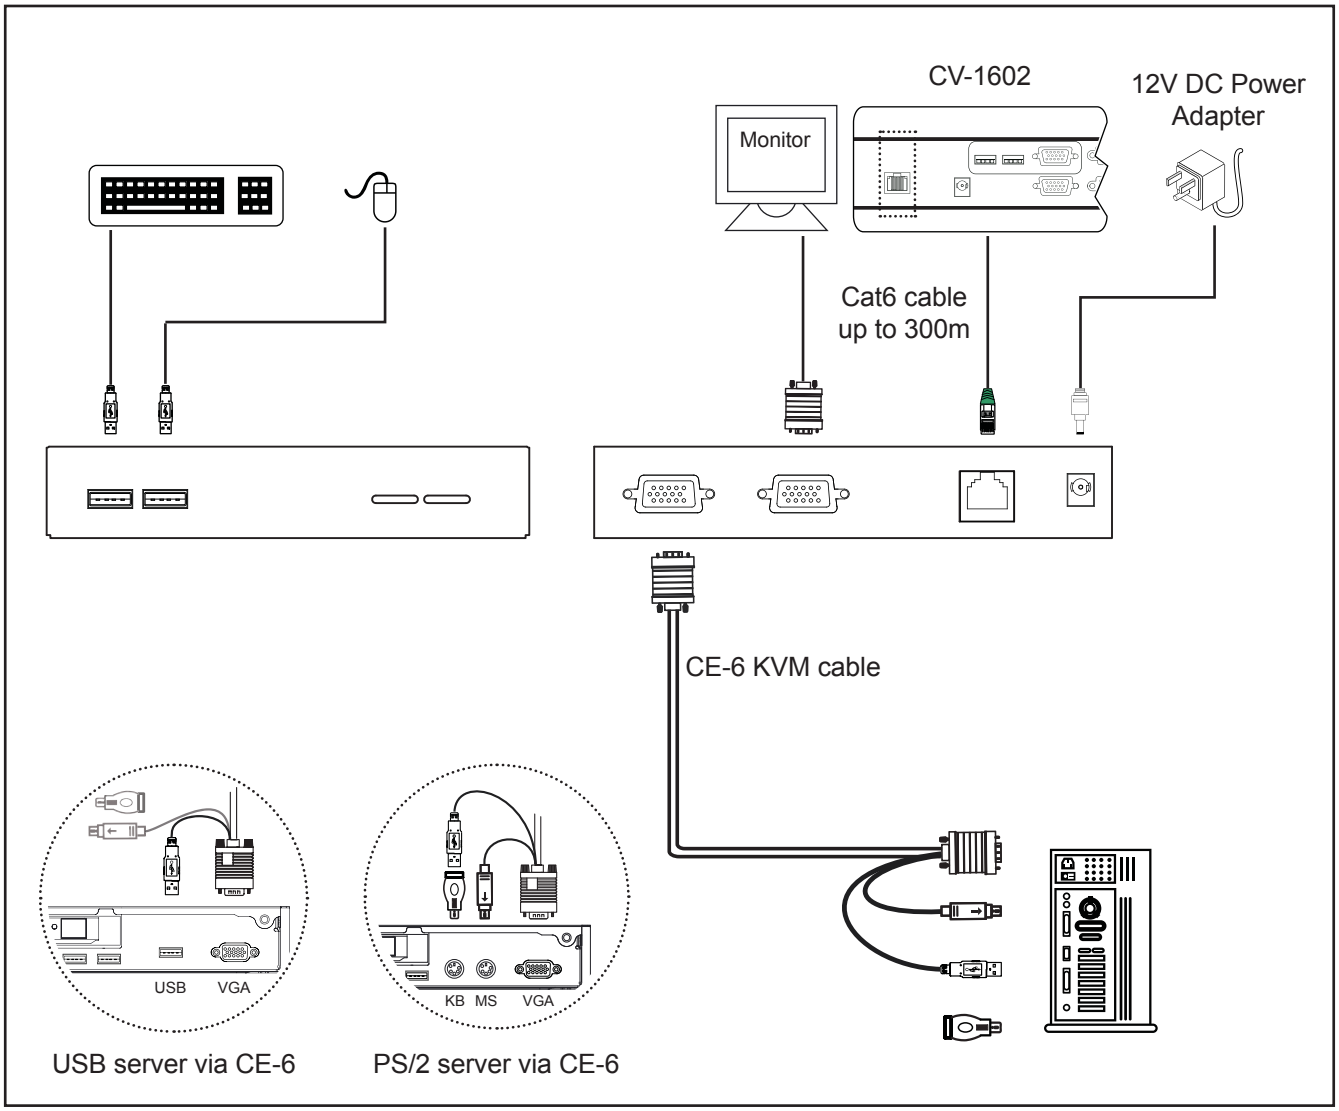

Cascade

- Cascade up to 8 levels, 128 servers
- Interconnection with Combo Cat6 KVM
- Cascading multiple KVM by CBC-6 cable.

Cascade
Rackmount KVM

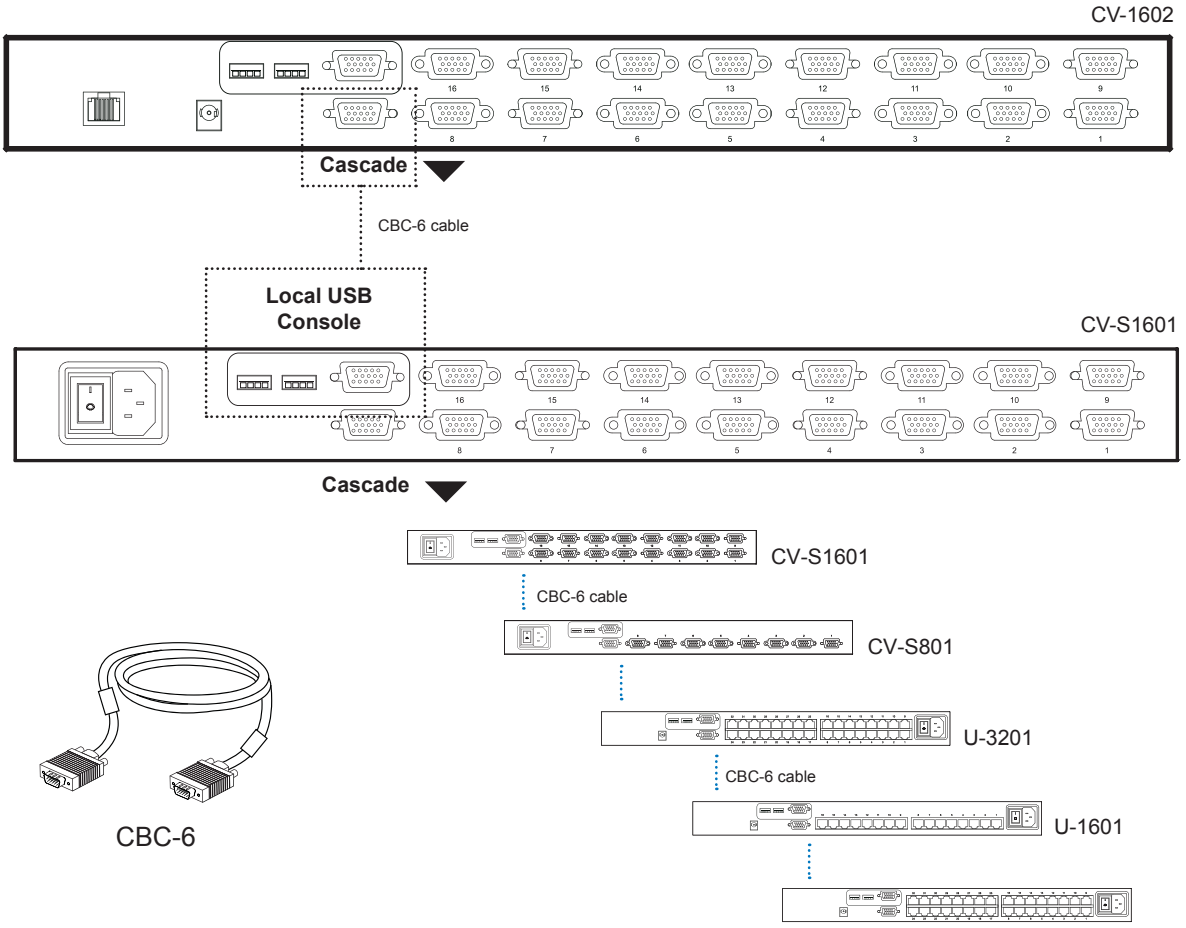

Cascade

- Cascade up to 8 levels, 128 servers
- Interconnection with Combo Cat6 KVM
- Cascading multiple KVM by CBC-6 cable.

Cascade
KVM modules

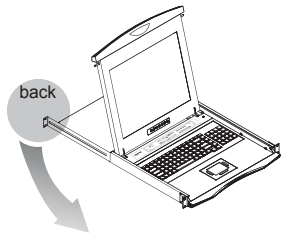

CV-1602 KVM module

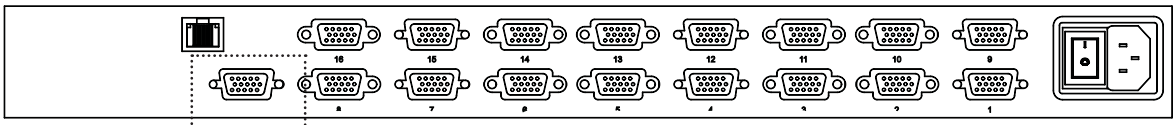

Cascade

CBC-6 cable

Local USB Console

CV-S1601

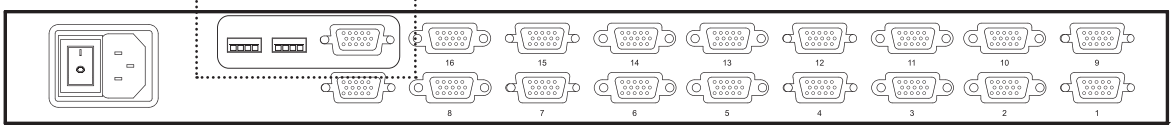

Cascade



CV-S1601

CBC-6 cable



CV-S801

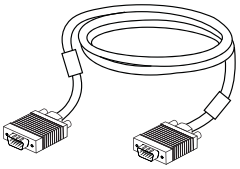

CBC-6



U-3201

CBC-6 cable



U-1601



Package Content (only for rackmount KVM)

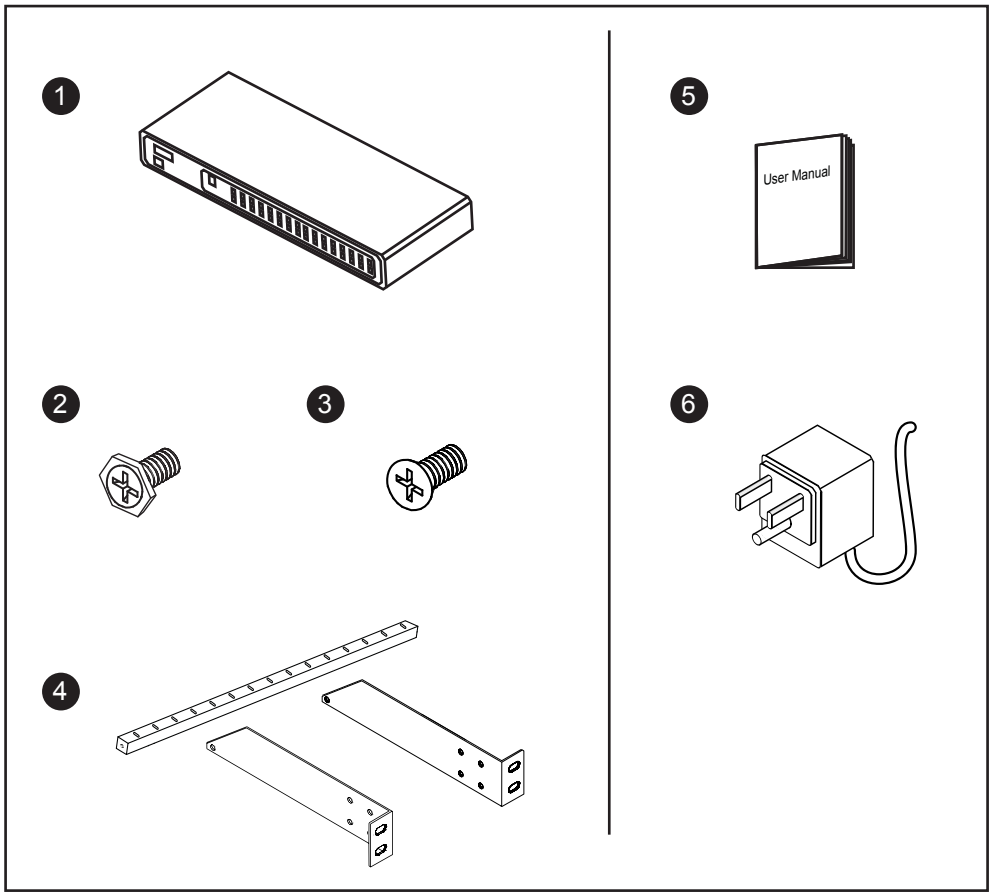

① KVM switch x 1 pc

② Screw M3.2 x 4.5mm x 4 pcs

③ Screw M4 x 10mm x 8 pcs

④ Bracket x 1 set

⑤ User manual x 2 pcs

⑥ 12V Power adapter x 1 pc

Connection

IP-802

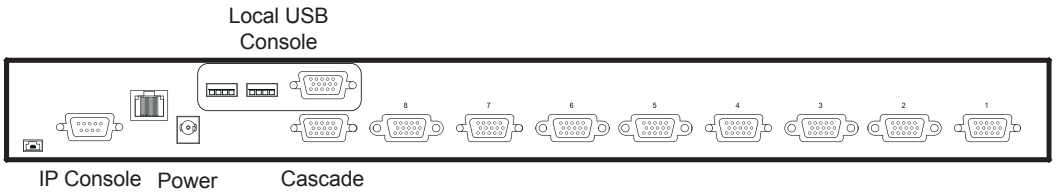

IP-1602

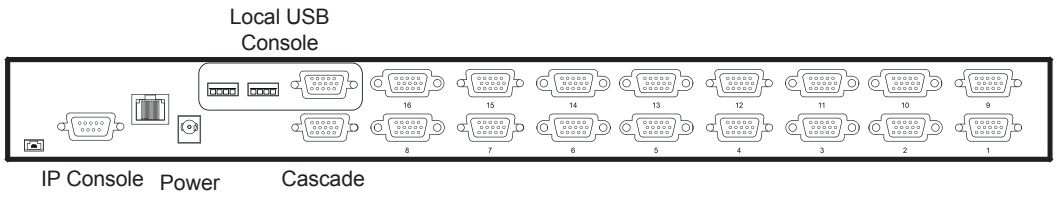

Connection
Rackmount KVM

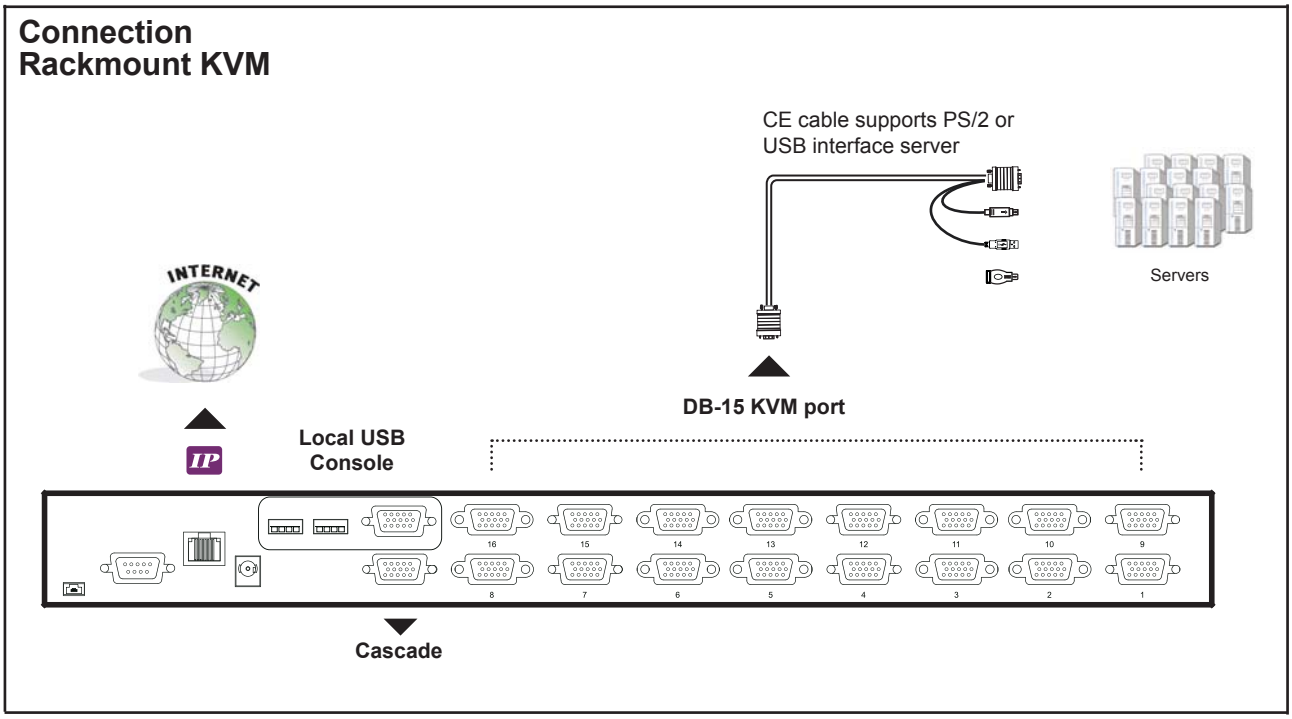

Connection KVM modules

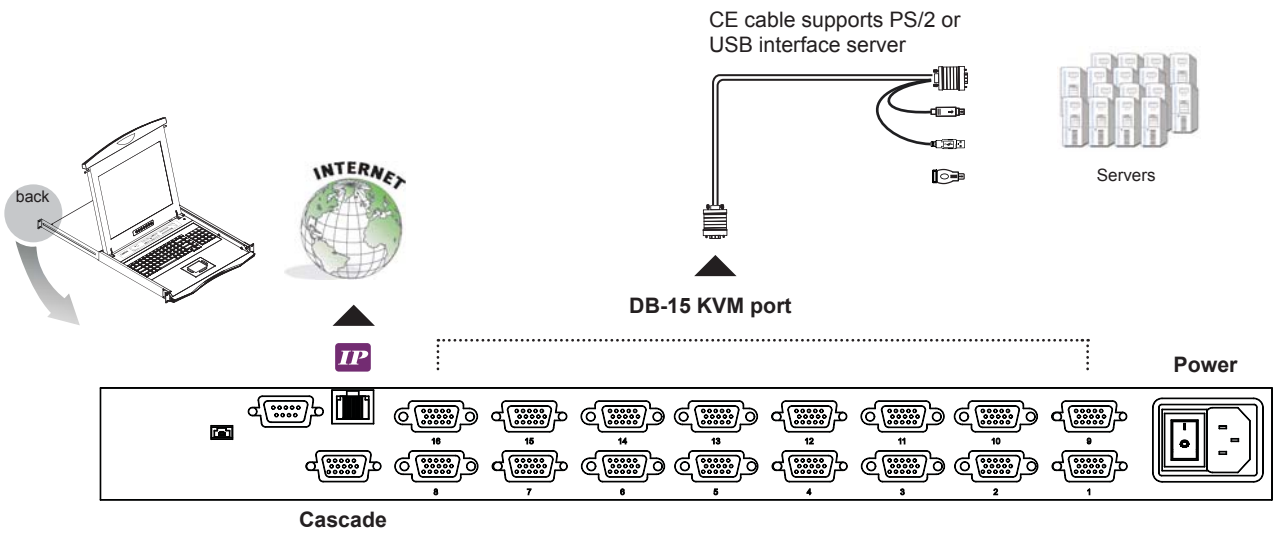

Connection CE-6

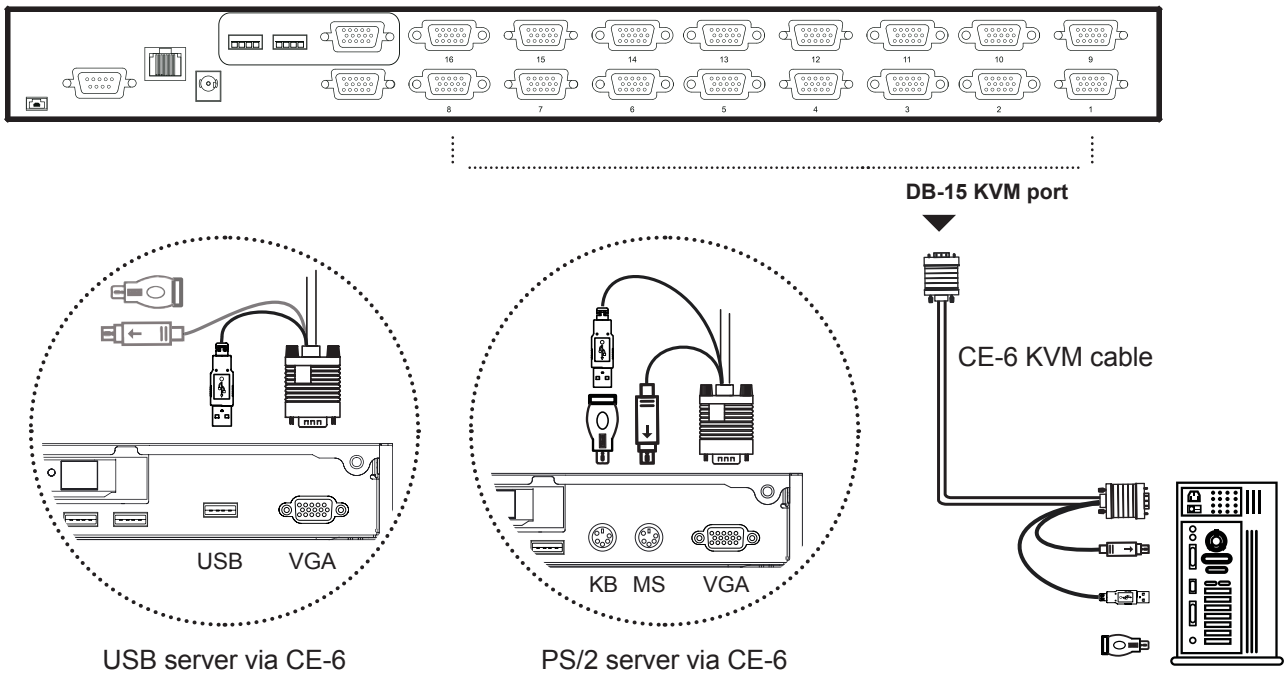

Cascade

- Cascade up to 8 levels, 128 servers
- Interconnection with Combo Cat6 KVM
- Cascading multiple KVM by CBC-6 cable.

Cascade
Rackmount KVM

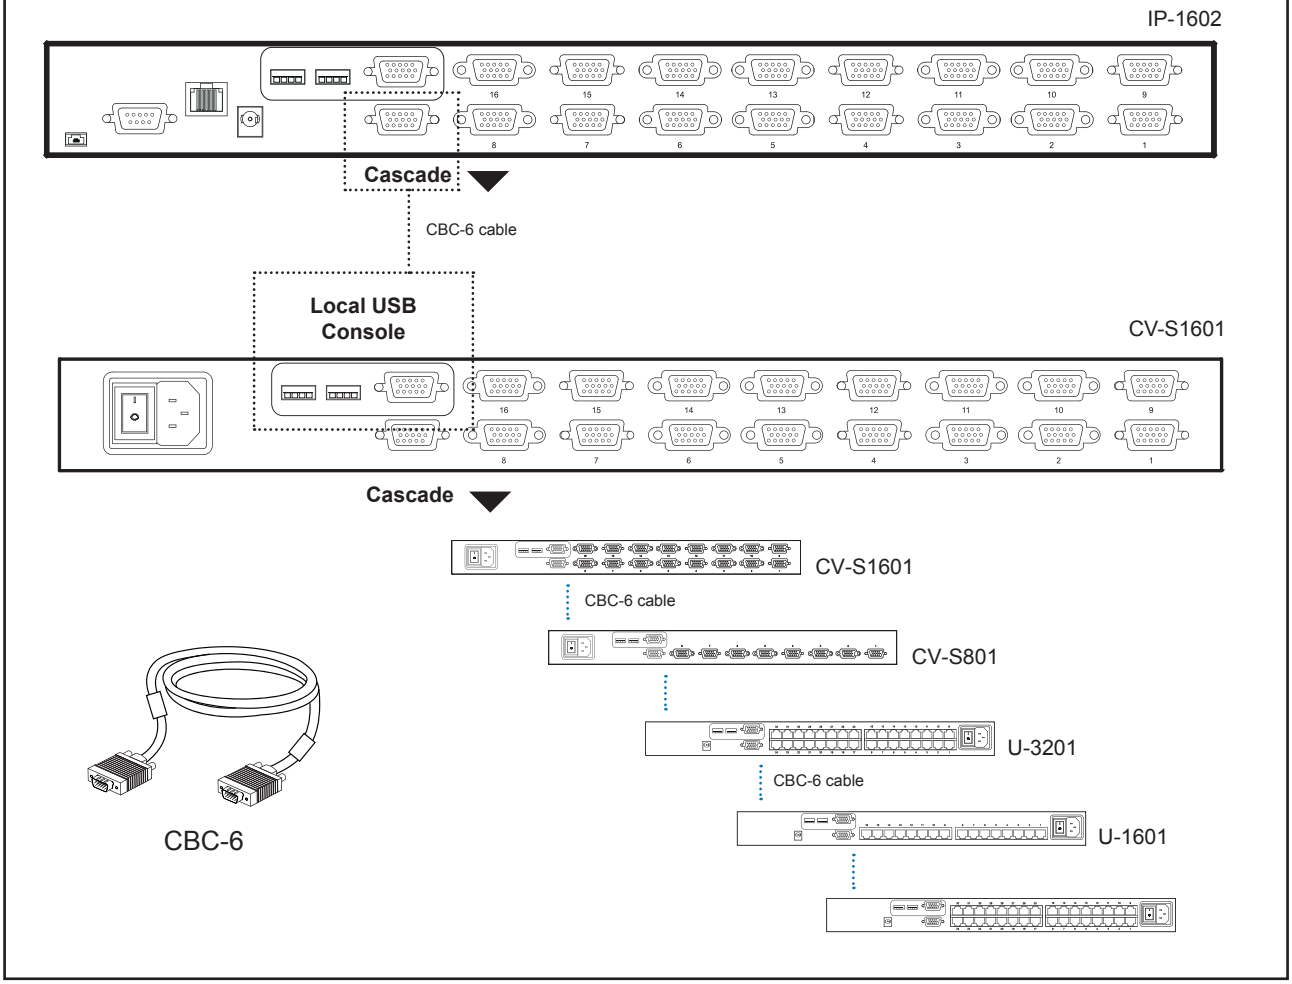

Cascade

- Cascade up to 8 levels, 128 servers
- Interconnection with Combo Cat6 KVM
- Cascading multiple KVM by CBC-6 cable.

Cascade
KVM modules

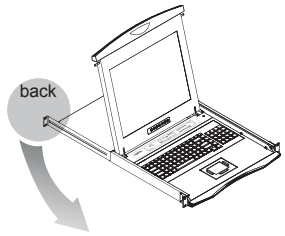

IP-1602 KVM module

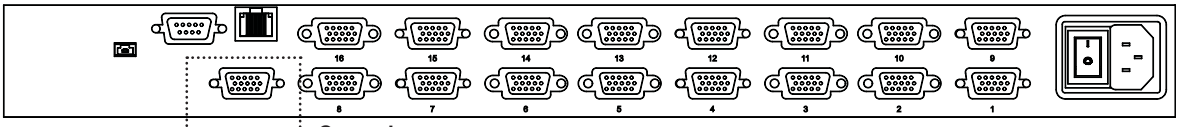

Cascade

CBC-6 cable

Local USB Console

CV-S1601

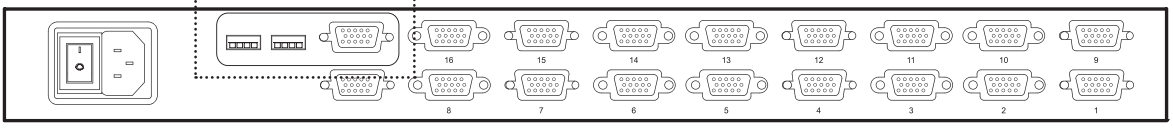

Cascade



CV-S1601

CBC-6 cable



CV-S801

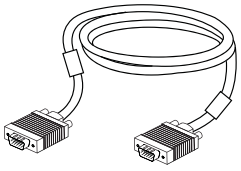

CBC-6



U-3201

CBC-6 cable



U-1601



CV-S801 / CV-S1601	
■ **KVM Port**	
Number of ports:	8 or 16
Connector:	DB-15 combo connector
Connectivity:	Combo 4-in-1 KVM cable, up to 6, 10 & 15 feet
■ **Local Console**	
Graphic connector:	1 x DB-15 VGA
Resolution:	Up to 1600 x 1200
Input device:	2 x USB type A for keyboard & mouse
■ **Management**	
Multilingual OSD:	English, France, German, Spanish, Italian, Russian, Simplified Chinese, Japanese
Hotkey combination:	Scroll-lock, Cap-lock, Num-lock, Alt, Ctrl & Win
Security:	Password enable & disable, up to 8 users profile for port access
PC Selection:	Front button, OSD menu & hotkey
■ **Expansion:**	Up to 128 servers by 8-level cascade
■ **Compatibility**	
Multi-platform:	Mix PCs, SUNs, IBMs, HPs, DELLs Server
Support:	Windows Vista / 2003 / XP / 2000, Linux, Netware, Unix
■ **Power**	
Input:	100 or 240V AC at 50 or 60 Hz via IEC type cord OR AC / DC power adapter 12V@3.3A (optional)
Option DC:	12V / 24V / 48V DC input
Consumption:	Max. 48 Watt, Standby 5 Watt
■ **Regulatory Approval:**	FCC, CE
■ **Environmental**	
Operating:	0 to 50°C
Storage:	-5 to 60°C
Relative humidity:	90%, non-condensing
Shock:	50G peak acceleration (11ms, half-sine wave)
Vibration:	58~100Hz / 0.98G (11ms / cycle)
■ **Product Information**	
Dimension (W x D x H):	446 x 180 x 44 mm / 17.6 x 7.1 x 1.7 inch
Net weight:	4 kg / 9 lb
■ **Packing Information**	
Dimension (W x D x H):	510 x 400 x 77 mm / 20.1 x 15.7 x 3 inch
Gross weight:	7 kg / 15 lb

5.4 Specifications

CV-802 / CV-1602		
■	**KVM Port**	
	Number of ports:	8 or 16
	Connector:	DB-15 combo connector
	Connectivity:	Combo 4-in-1 KVM cable, up to 6, 10 & 15 feet
■	**Local Console**	
	Graphic connector:	1 x DB-15 VGA
	Resolution:	Up to 1600 x 1200
	Input device:	2 x USB type A for keyboard & mouse
■	**Remote Console**	
	Connector:	HDDB 15-pin, VGA
	Resolution:	Up to 1600 x 1200
	Input device:	2 x USB type A for keyboard & mouse
	Remote I/O:	RJ45 via Cat5 / Cat5e / Cat6 cable up to 300m
	Compensation:	Auto adjust for cable length
■	**Expansion:**	Up to 128 servers by 8-level cascade
■	**Compatibility**	
	Multi-platform:	Mix PCs, SUNs, IBMs, HPs, DELLs Server
	Support:	Windows Vista / 2003 / XP / 2000, Linux, Netware, Unix, DOS
■	**Power**	
	Input:	100 or 240V AC at 50 or 60 Hz via IEC type cord OR AC / DC power adapter 12V@3.3A (optional)
	Option DC:	12V / 24V / 48V DC input
	Consumption:	Max. 24 Watt, Standby 5 Watt
■	**Regulatory Approval:**	FCC, CE
■	**Environmental**	
	Operating:	0 to 50°C
	Storage:	-5 to 60°C
	Relative humidity:	90%, non-condensing
	Shock:	50G peak acceleration (11ms, half-sine wave)
	Vibration:	58~100Hz / 0.98G (11ms / cycle)
■	**Product Information**	
	Dimension (W x D x H):	446 x 180 x 44 mm / 17.6 x 7.1 x 1.7 inch
	Net weight:	4 kg / 9 lb
■	**Packing Information**	
	Dimension (W x D x H):	510 x 400 x 77 mm / 20.1 x 15.7 x 3 inch
	Gross weight:	7 kg / 15 lb

IP-802 / IP-1602		
■	**KVM Port**	
	Number of ports:	8 or 16
	Connector:	DB-15 combo connector
	Connectivity:	Combo 4-in-1 KVM cable, up to 6, 10 & 15 feet
■	**Local Console**	
	Graphic connector:	1 x DB-15 VGA
	Resolution:	Up to 1600 x 1200
	Input device:	2 x USB type A for keyboard & mouse
■	**IP Remote Console**	
	Connector:	RJ45 Ethernet
	User management:	15-user login, 1 x active user
	Network protocol:	DHCP / BOOTP / DNS
	Security:	SSL v3, RSA, AES, HTTP / HTTPs, CSR
	Resolution:	Up to 1600 x 1200
	Browser:	IE, Firefox, Safari, Netscape
	Others:	Serial port, virtual media via USB
■	**Expansion:**	Up to 128 servers by 8-level cascade
■	**Compatibility**	
	Multi-platform:	Mix PCs, SUNs, IBMs, HPs, DELLs Server
	Support:	Windows Vista / 2003 / XP / 2000, Linux, Netware, Unix
■	**Power**	
	Input:	100 or 240V AC at 50 or 60 Hz via IEC type cord OR AC / DC power adapter 12V@3.3A (optional)
	Option DC:	12V / 24V / 48V DC input
	Consumption:	Max. 24 Watt, Standby 5 Watt
■	**Regulatory Approval:**	FCC, CE
■	**Environmental**	
	Operating:	0 to 50°C
	Storage:	-5 to 60°C
	Relative humidity:	90%, non-condensing
	Shock:	50G peak acceleration (11ms, half-sine wave)
	Vibration:	58~100Hz / 0.98G (11ms / cycle)
■	**Product Information**	
	Dimension (W x D x H):	446 x 180 x 44 mm / 17.6 x 7.1 x 1.7 inch
	Net weight:	IP-802: 4.5 kg / 10 lb, IP-1602: 5 kg / 11 lb
■	**Packing Information**	
	Dimension (W x D x H):	510 x 400 x 77 mm / 20.1 x 15.7 x 3 inch
	Gross weight:	IP-802: 5.5 kg / 12 lb, IP-1602: 6 kg / 13 lb

Power ON

- Turn off all servers and KVM switches
- Make sure all cables / connectors are properly connected
- Recommend Power ON sequence is monitor, KVM switch finally computer

Front Panel - Port LED Indications

8 ports

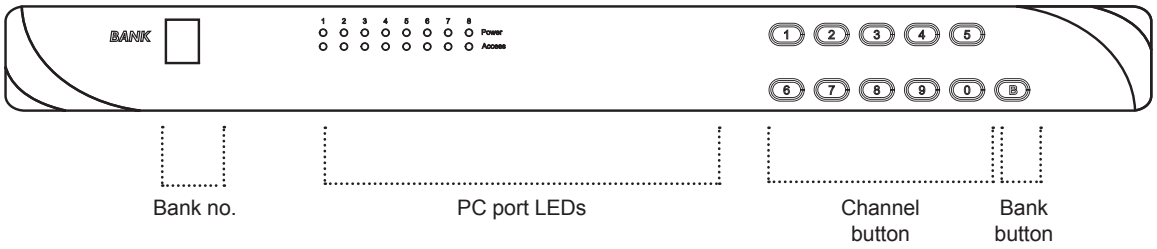

16 ports



Bank no.	7-Segment BANK LED indication
PC port LEDs	***Power*** : **Blue** LED on indicating a PC is connecting to the port ***Access*** : **Green** LED on indicating a selected channel
Channel button	Press to select channel from 01 to 16
Bank button	Select the bank from 1 to 8

6.2 Password

The password is disabled by default (i.e. There is no password required when you power on the KVM switch for the first time)

■ **Enable password**

1. Press the KVM hotkey **Scroll Lock + Scroll Lock + U**
2. Logout the KVM by pressing the hotkey **Scroll Lock + Scroll Lock + P**
3. In SUPERVISOR level, enter “00000000” eight zeros in user name & password field **(Do not use “0” on number pad)**
4. In USER level, press **Space bar** + **Enter** in user name & password field

   Remark: Automatic logout after 10 minutes of inactivity

■ **Set your own user name & password**

1. Login the KVM in SUPERVISOR level by pressing “00000000” eight zeros in user name & password field
2. Call KVM OSD menu by pressing the KVM hotkey **Scroll Lock + Scroll Lock + Space Bar**
3. Press **F1** to the MAIN MENU
4. Select “USER SECURITY”
5. Set password in SUPERVISOR & USER level
   a. In the left-top row “S” (SUPERVISOR), press **Enter** to set your own user name & password
   b. In the row 1 to 8 (USER), press **Enter** to set your own user name & password
6. Press **Enter** to save the setting or press **Esc** to cancel the editing without any change

Remark: a. Blank has underscore, while SPACE doesn’t have
b. Press any alphanumeric key to move to next input item. SPACE is treated as a valid character

■ **Change your password**

1. Login the KVM in SUPERVISOR level by pressing your own user name & password
2. Call KVM OSD menu by pressing the KVM hotkey **Scroll Lock + Scroll Lock + Space Bar**
3. Press **F1** to the MAIN MENU
4. Select “USER SECURITY”
5. Change password in SUPERVISOR & USER level
   a. In the left-top row “S” (SUPERVISOR), press **Enter** to change your user name & password
   b. In the row 1 to 8 (USER), press **Enter** to change your user name & password
6. Press **Enter** to save the setting or press **Esc** to cancel the editing without any change

Remark: a. Blank has underscore, while SPACE doesn’t have
b. Press any alphanumeric key to move to next input item. SPACE is treated as a valid character

■ **Disable your password**

1. Press the KVM hotkey **Scroll Lock + Scroll Lock + U**
2. Logout the KVM by pressing the KVM hotkey **Scroll Lock + Scroll Lock + P**
3. You don’t need user name & password to access the KVM OSD menu

■ **Forget your password**

Please contact your supplier for further support

Remark:

■ You must press the KVM hotkey within 2 seconds
■ A beep sound will be heard for successful entering KVM hotkey

OSD Menu

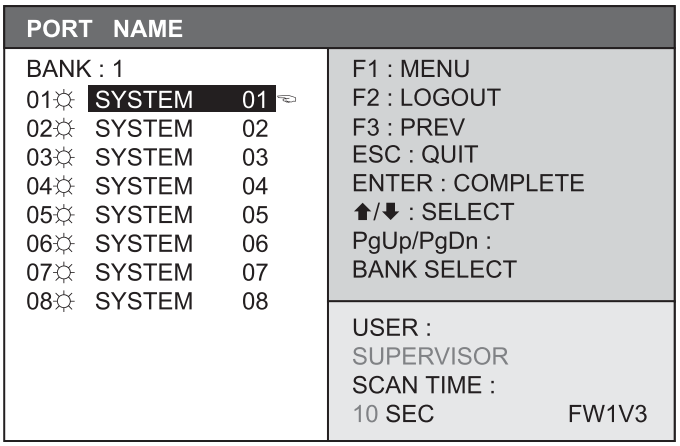

OSD operation

☼ next to the system name	The PC is powered on
☜ next to the system name	The PC is selected
F1	Access F1 MAIN MENU
F2	Logout the OSD menu
F3	Previous menu
Esc	Cancel / Quit
Enter	Complete / Switch to selected port
⬆/⬇	Switch to previous or next port
PgUp/PgDn	Switch to previous bank or next bank
1 / 2 / 3 / 4	Display port 01 ~ 08 / 09 ~ 16 / 17 ~ 24 / 25 ~ 32 Remark: Display port 17 ~ 32 for 32 port model only

F1 Main Menu

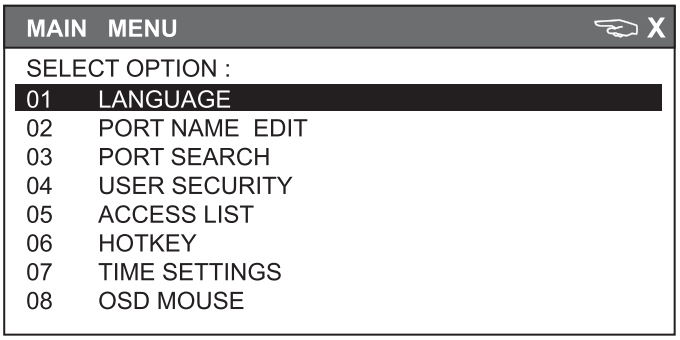

01 LANGUAGE	OSD language change
02 PORT NAME EDIT	Define port name
03 PORT SEARCH	Quick searching by port name
04 USER SECURITY	Change password
05 ACCESS LIST	Define user access authority
06 HOTKEY	Change hotkey
07 TIME SETTINGS	Modify scan display time interval
08 OSD MOUSE	Modify OSD mouse speed

Local Console Hotkey

Hotkey	Function
Scroll Lock + Scroll Lock + Space Bar	Calling OSD menu
Right-button mouse + Esc	Calling OSD menu
Scroll Lock + Scroll Lock + ↑	Switch to previous port
Scroll Lock + Scroll Lock + ↓	Switch to next port
Scroll Lock + Scroll Lock + PgUp / PgDn	Switch to previous bank or next bank
Scroll Lock + Scroll Lock + Bank no. + Port no.	Switch to specific port
Scroll Lock + Scroll Lock + B	Turn the buzzer ON and OFF * Default the buzzer is ON
Scroll Lock + Scroll Lock + P	Logout the KVM if password security is ON. Show up the status windows

Advance hotkeys (for Supervisor login only)

Scroll Lock + Scroll Lock + S	Activate auto-scan mode for connected servers *Press any key to exit the auto-scan mode
Scroll Lock + Scroll Lock + R	Reset all the KVM settings to factory default *Except User Security settings
Scroll Lock + Scroll Lock + U	Disable and enable password security *Default security is OFF
Scroll Lock + Scroll Lock + L	To enable / disable the screen saving function and 10 minutes auto-logout *Default the screen saving is OFF

Remarks:

- Example of "**Scroll Lock + Scroll Lock +** Bank no. + Port no."
  - Bank No. : 1 to 8
  - Port No. : 01 to 16
  - e.g. Bank 1 Port 4 : **Scroll Lock + Scroll Lock + 1 + 0 + 4**
  - e.g. Bank 2 Port 16 : **Scroll Lock + Scroll Lock + 2 + 1 + 6**
- You must press the hotkey within 2 seconds
- A beep sound will be heard for successful entering
- The numeric keypad is not supported, while in OSD screen, the arrow keys, PgUp, PgDn, and Enter keys are supports

Remote Console Hotkey

Hotkey	Function
Caps Lock + Caps Lock + F1	Show up the Help OSD windows
Caps Lock + Caps Lock + F2	Select Hotkey *Default is Caps Lock
Caps Lock + Caps Lock + C	Toggle switch between remote & local port
Caps Lock + Caps Lock + Q	Turn the buzzer ON & OFF *Default the buzzer is ON
Caps Lock + Caps Lock + S	Activate auto-scan mode for remote & local port *The scan time interval is 5 seconds
Caps Lock + Caps Lock + A	Auto-adjust the video signal

Quick Installation Guide of IP KVM for remote access

Please perform the follow steps
1. Power off all KVM hardware and connected devices.
2. Connect the power supply to IP KVM
3. Connect the monitor, keyboard & mouse to console port of IP KVM (not applicable to integrated LCD drawer version)
4. Connect the KVM cable to IP KVM and target servers
5. Use an Ethernet cable to connect your local area network (LAN) to the IP console port on the KVM

Initial IP configuration

The factory default, DHCP mode is disable (IP auto configuration = None), and the preset default address as below :

IP address : 192.168.1.22 (default)
Subnet-mask : 255.255.255.0
Default Gateway: None

Install the “PSetup.exe” program from the provided CD-disc to a computer which networked with IP KVM switch, then press Refresh Devices the look for the IP-KVM.

a. Select the MAC address from label on the bottom of the IP-KVM switch
b. Click Query Device

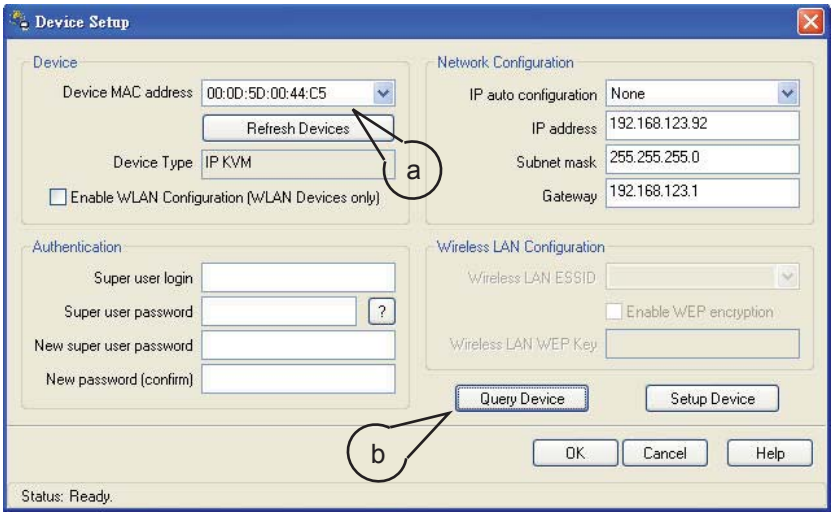

1. Configure the IP KVM with fixed address

a. Setup “IP auto configuration” as “None”; setup IP address and Subnet mask
b. Enter Super user login and password for Authentication (default : super/pass)
c. Setup Device. If super login was authenticated, it’ll show “Successfully configured device”. Otherwise it’ll show “Permission Denied”.

2. Configure the IP KVM with DHCP

a. Setup “IP auto configuration” as “DHCP”
b. Enter Super user login and password for Authentication (default : super/pass)
c. Setup Device. If super login was authenticated, it’ll show “Successfully configured device”. Otherwise it’ll show “Permission Denied”.

3. Install JVM on Client system

The IP-KVM switch was remote accessed by a standard JAVA enabled web browser. The client system must install Sun JVM 1.4.2 or above for remote access the IP KVM.

Remark:

■ At a minimum, you must have Internet Explorer 6.0 or Netscape 7.0 or Molliza 1.6 (and above) installed on your client computer.

4. **Remote access the IP-KVM switch via Web**
   Using the HTTP protocol or a secure encrypted connection via HTTPS and entering the configured IP address of IP KVM switch into the web browser to remote access the IP KVM switch.

   With successful connection to IP KVM, the login page will show as below, then key in the default user name & password

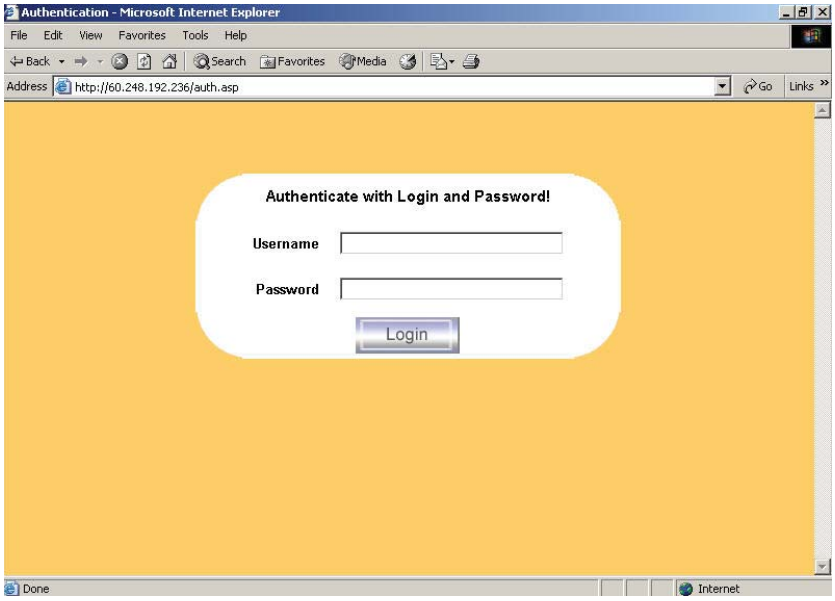

5. After successful login to IP KVM, you will enter the main page of IP KVM as below :

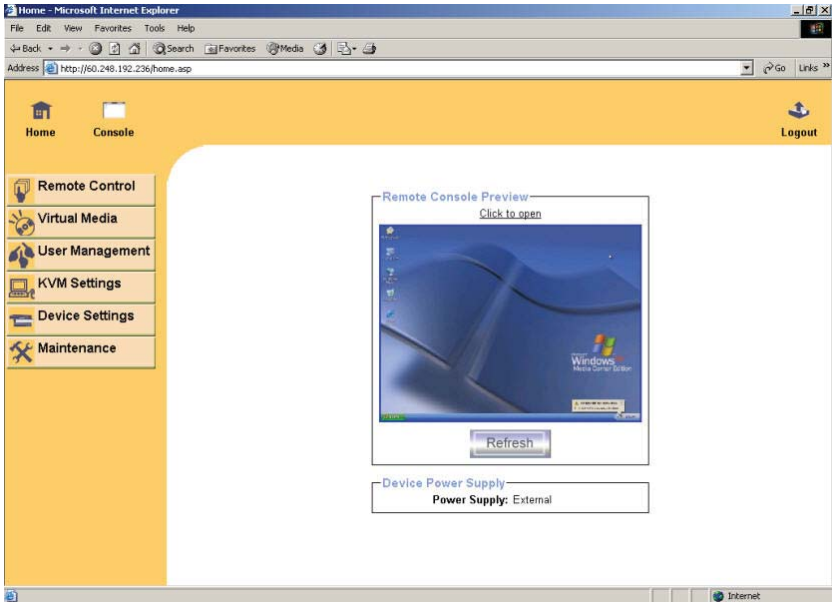

Remark:

- We strongly recommend the user changes the default username and password to user specific values
- Please refer to the “IP KVM User Manual” for more detailed information about IP KVM switch.

6.6 Optional Accessories

1. Combo KVM cable

1.1 CE-6 6 feet
1.2 CE-10 10 feet
1.3 CE-15 15 feet

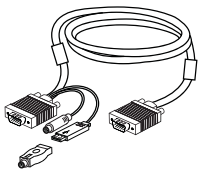

2. Cat5 cable

2.1 CU-3 3 feet
2.2 CU-6 6 feet
2.3 CU-10 10 feet
2.4 CU-15 15 feet
2.5 CU-33 33 feet
2.6 CU-66 66 feet

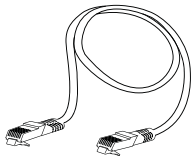

3. Cat5 / USB KVM cascade cable

3.1 CBC-6 6 feet

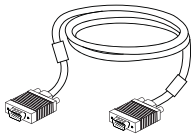

4. DVI-USB Dongle for Cat6 KVM

4.1 DG-100SD DVI-D



5. VGA-USB Dongle for Cat6 KVM

5.1 DG-100S USB

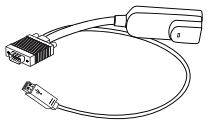

6. VGA-PS/2 Dongle for Cat6 KVM

6.1 DG-100 PS/2

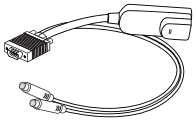

7. Power cord

7.1 IEC power cord
7.2 NEMA 5-15 power cord (US)
7.3 BS 1363 power cord (UK)
7.4 CEE 7/4 power cord (German)
7.5 AS 3112 power cord (Australia)

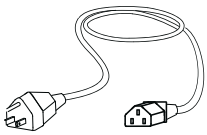

6.7 DC Power 12V, 24V, 48V Input  Combo KVM Usage

Model	12V	24V	48V
Input rating			
Input voltage:	12-Volt	24-Volt	48-Volt
Input range:	9 ~ 18V	18 ~ 36V	36 ~ 75V
Input current			
- No load	50 mA	50 mA	50 mA
- Full load	4950 mA	2450 mA	1220 mA
Output rating			
Output voltage:	12-Volt	12-Volt	12-Volt
Output current:	4.16A	4.16A	4.16A
Efficiency	84%	85%	85%

Remarks:

■ Package does not include power cord